



## CR95HF

13.56-MHz multi-protocol contactless transceiver IC  
with SPI and UART serial access

### Features

- Operating modes supported:
  - Reader/Writer
- Hardware features
  - Dedicated internal frame controller
  - Highly integrated Analog Front End (AFE) for RF communications
  - Transmission and reception modes
  - Optimized power management
  - Tag Detection modes
- RF communication @13.56 MHz
  - ISO/IEC 14443 Type A and B
  - ISO/IEC 15693
  - ISO/IEC 18092
- Communication interfaces with a Host Controller
  - Serial peripheral interface (SPI) Slave interface
  - Universal asynchronous receiver/transmitter (UART)
- 32-lead, 5x5 mm, very thin fine pitch quad flat (VFQFPN) ECOPACK® package



VFQFPN32 5x5 mm

### Applications

Typical protocols supported:

- ISO/IEC 14443-3 Type A and B cards and tags
- ISO/IEC 15693 and ISO/IEC 18000-3M1 tags
- NFC Forum tags: Types 1, 2, 3 and 4
- ST Dual Interface EEPROM

# Contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Description .....</b>                                      | <b>4</b>  |
| 1.1      | Block diagram .....   | 5         |
| 1.2      | List of terms .....   | 5         |
| <b>2</b> | <b>Pin and signal descriptions .....</b>                      | <b>6</b>  |
| <b>3</b> | <b>Power management and operating modes .....</b>             | <b>8</b>  |
| 3.1      | Operating modes .....   | 8         |
| 3.2      | Startup sequence .....  | 9         |
| <b>4</b> | <b>Communication protocols .....</b>                          | <b>11</b> |
| 4.1      | Universal asynchronous receiver/transmitter (UART) .....      | 11        |
| 4.2      | Serial peripheral interface (SPI) .....                       | 12        |
| 4.2.1    | Polling mode .....  | 12        |
| 4.2.2    | IRQ mode .....  | 14        |
| <b>5</b> | <b>Commands .....</b>   | <b>15</b> |
| 5.1      | Command format .....  | 15        |
| 5.2      | List of commands .....  | 15        |
| 5.3      | IDN command (0x01) description .....                          | 16        |
| 5.4      | Protocol Select command (0x02) description .....              | 16        |
| 5.5      | Send Receive (SendRecv) command (0x04) description .....      | 19        |
| 5.6      | Idle command (0x07) description .....                         | 23        |
| 5.6.1    | Idle command parameters .....                                 | 24        |
| 5.6.2    | Using LFO frequency setting to reduce power consumption ..... | 25        |
| 5.6.3    | Optimizing wake-up conditions .....                           | 26        |
| 5.6.4    | Using various techniques to return to Ready state .....       | 26        |
| 5.6.5    | Tag detection calibration procedure .....                     | 28        |
| 5.7      | Read Register (RdReg) command (0x08) description .....        | 29        |
| 5.8      | Write Register (WrReg) command (0x09) description .....       | 30        |
| 5.8.1    | Improving RF performance .....                                | 30        |
| 5.9      | BaudRate command (0x0A) description .....                     | 32        |
| 5.10     | Echo command (0x55) description .....                         | 32        |

|                         |   |           |
|-------------------------|---|-----------|
| <b>6</b>                | <b>Electrical characteristics</b>   | <b>33</b> |
| 6.1                     | Absolute maximum ratings  | 33        |
| 6.2                     | DC characteristics  | 34        |
| 6.3                     | Power consumption characteristics   | 35        |
| 6.4                     | SPI characteristics   | 36        |
| 6.5                     | RF characteristics  | 37        |
| 6.6                     | Oscillator characteristics  | 38        |
| <b>7</b>                | <b>Package mechanical data</b>  | <b>39</b> |
| <b>8</b>                | <b>Part numbering</b>   | <b>41</b> |
| <b>Appendix A</b>       | <b>Additional Idle command description</b>  | <b>42</b> |
| <b>Appendix B</b>       | <b>Example of tag detection calibration process</b>                                 | <b>43</b> |
| <b>Appendix C</b>       | <b>Example of tag detection command using results of tag detection calibration</b>  | <b>46</b> |
| <b>Appendix D</b>       | <b>Examples of CR95HF command code to activate NFC Forum and ISO/IEC 15693 tags</b> | <b>47</b> |
| D.1                     | ISO/IEC 14443 Type A  | 47        |
| D.1.1                   | NFC Forum Tag Type 1 (Topaz)  | 47        |
| D.1.2                   | NFC Forum Tag Type 2  | 49        |
| D.1.3                   | NFC Forum Tag Type 4A   | 50        |
| D.2                     | ISO/IEC 14443 Type B  | 52        |
| D.2.1                   | NFC Forum Tag Type 4B   | 52        |
| D.3                     | ISO/IEC 18092   | 54        |
| D.3.1                   | NFC Forum Tag Type 3 (FeliCa)   | 54        |
| D.4                     | ISO/IEC 15693   | 55        |
| D.4.1                   | Tag Type 5  | 55        |
| <b>Revision history</b> |   | <b>57</b> |

# 1 Description

The CR95HF is an integrated transceiver IC for contactless applications.

The CR95HF manages frame coding and decoding in Reader mode for standard applications such as near field communication (NFC), proximity and vicinity standards.


The CR95HF embeds an Analog Front End to provide the 13.56 MHz Air Interface.

The CR95HF supports ISO/IEC 14443 Type A and B, ISO/IEC 15693 (single or double subcarrier) and ISO/IEC 18092 protocols.

The CR95HF also supports the reading of NFC Forum Type 1, 2, 3 and 4 tags.


In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK<sup>®</sup> packages, depending on their level of environmental compliance. ECOPACK<sup>®</sup> specifications, grade definitions and product status are available at: [www.st.com](http://www.st.com). ECOPACK<sup>®</sup> is an ST trademark.

**Figure 1. CR95HF application overview**

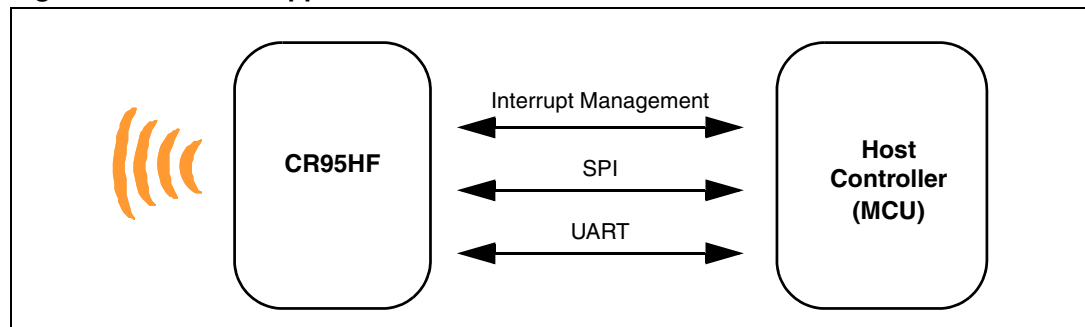

1.1 Block diagram

Figure 2. CR95HF block diagram

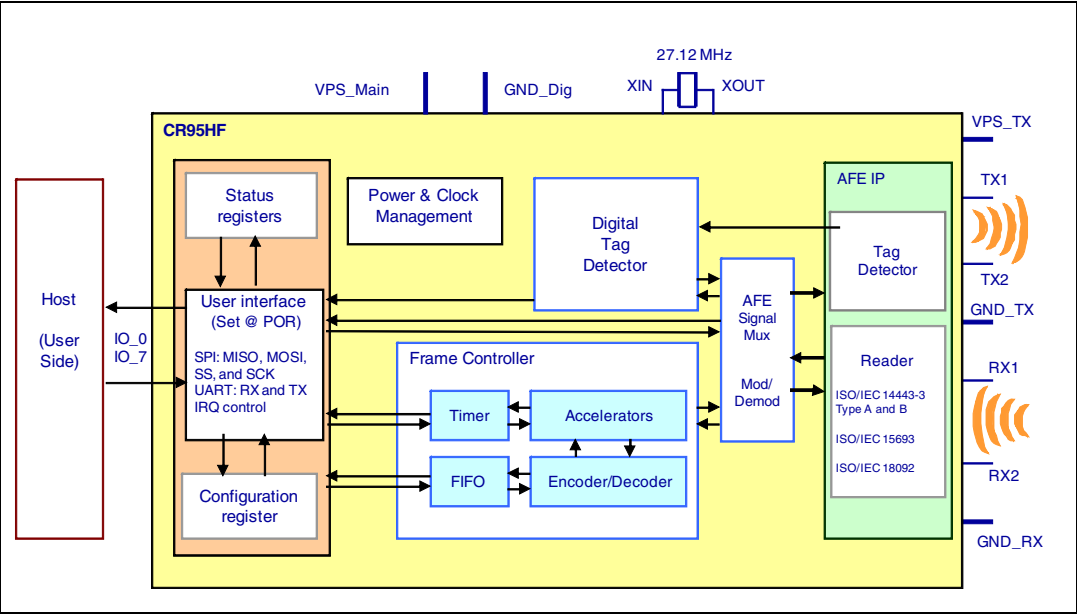


1.2 List of terms

Table 1. List of terms

| Term             | Meaning                                     |
|------------------|---|
| DAC              | Digital analog converter                    |
| GND              | Ground                                      |
| HFO              | High frequency oscillator                   |
| LFO              | Low frequency oscillator                    |
| MCU              | Microcontroller unit                        |
| RFU              | Reserved for future use                     |
| SPI              | Serial peripheral interface                 |
| t <sub>L</sub>   | Low frequency period                        |
| t <sub>REF</sub> | Reference time                              |
| UART             | Universal asynchronous receiver-transmitter |
| WFE              | Wait for event                              |

## 2 Pin and signal descriptions

**Figure 3. Pinout description**

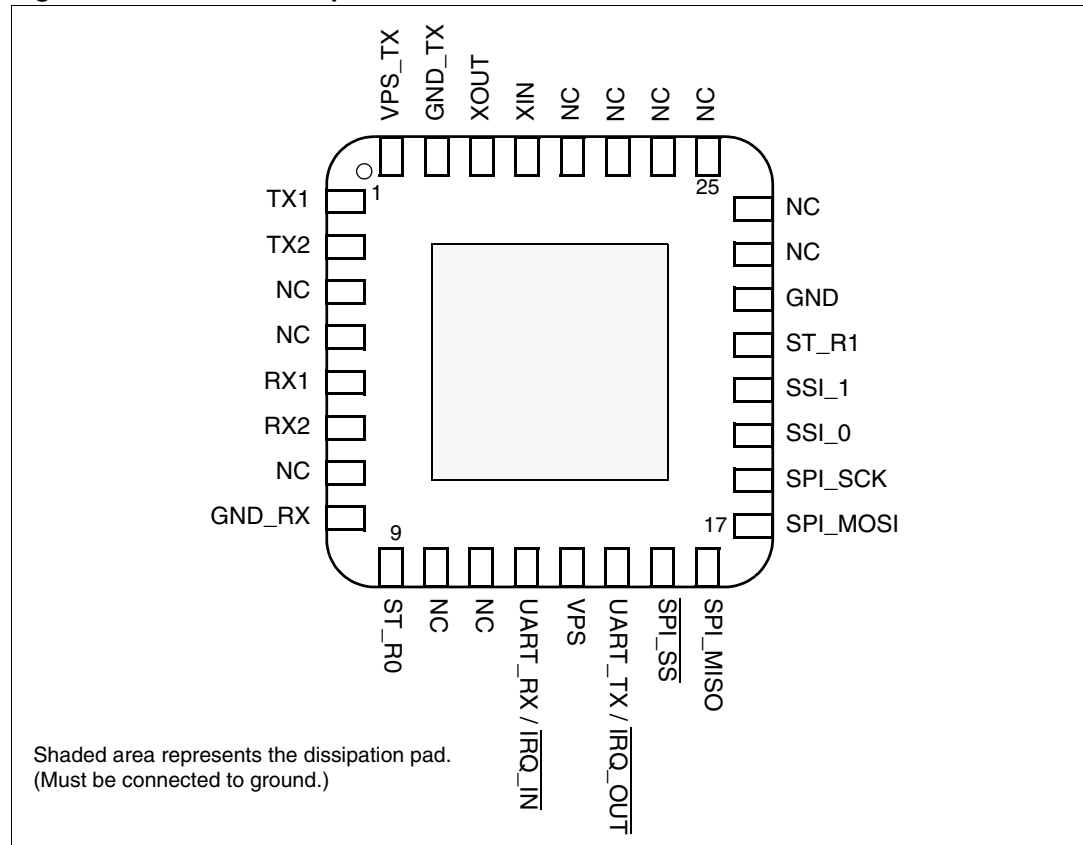

**Table 2. Pin descriptions**

| Pin | Pin name                        | Type <sup>(1)</sup> | Main function              | Alternate function |
|-----|---------------------------------|---------------------|----------------------------|--------------------|
| 1   | TX1                             | O                   | Driver output 1            |                    |
| 2   | TX2                             | O                   | Driver output 2            |                    |
| 3   | NC                              |                     | Not connected              |                    |
| 4   | NC                              |                     | Not connected              |                    |
| 5   | RX1                             | I                   | Receiver input 2           |                    |
| 6   | RX2                             | I                   | Receiver input 1           |                    |
| 7   | NC                              |                     | Not connected              |                    |
| 8   | GND_RX                          | P                   | Ground (analog)            |                    |
| 9   | ST_R0                           | O                   | ST Reserved <sup>(2)</sup> |                    |
| 10  | NC                              |                     | Not connected              |                    |
| 11  | NC                              |                     | Not connected              |                    |
| 12  | UART_RX / IRQ_IN <sup>(2)</sup> | I                   | UART receive pin           | Interrupt input    |
| 13  | VPS                             | P                   | Main power supply          |                    |

**Table 2. Pin descriptions (continued)**

| Pin | Pin name                               | Type<br>(1) | Main function                         | Alternate function |
|-----|--|-------------|---------------------------------------|--------------------|
| 14  | UART_TX / $\overline{\text{IRQ\_OUT}}$ | O           | UART transmit pin                     | Interrupt output   |
| 15  | $\overline{\text{SPI\_SS}}$            | I           | SPI Slave Select (active low)         |                    |
| 16  | SPI_MISO                               | O           | SPI Data, Slave Output <sup>(3)</sup> |                    |
| 17  | SPI_MOSI                               | I           | SPI Data, Slave Input <sup>(3)</sup>  |                    |
| 18  | SPI_SCK                                | I           | SPI serial clock                      |                    |
| 19  | SSI_0                                  | I           | Select serial communication interface |                    |
| 20  | SSI_1                                  | I           | Select serial communication interface |                    |
| 21  | ST_R1                                  | I           | ST Reserved <sup>(4)</sup>            |                    |
| 22  | GND                                    | P           | Ground (digital)                      |                    |
| 23  | NC                                     |             | Not connected                         |                    |
| 24  | NC                                     |             | Not connected                         |                    |
| 25  | NC                                     |             | Not connected                         |                    |
| 26  | NC                                     |             | Not connected                         |                    |
| 27  | NC                                     |             | Not connected                         |                    |
| 28  | NC                                     |             | Not connected                         |                    |
| 29  | XIN                                    |             | Crystal oscillator input              |                    |
| 30  | XOUT                                   |             | Crystal oscillator output             |                    |
| 31  | GND_TX                                 | P           | Ground (RF drivers)                   |                    |
| 32  | VPS_TX                                 | P           | Power supply (RF drivers)             |                    |

1. I: Input, O: Output, and P: Power

2. Must add a capacitor to ground.

3. Must not be left floating.

4. Must be connected to  $V_{PS}$ .

## 3 Power management and operating modes

### 3.1 Operating modes

The CR95HF has 2 operating modes: Wait for Event (WFE) and Active. In Active mode, the CR95HF communicates actively with a tag or an external host (MCU). WFE mode includes four low consumption states: Power-up, Hibernate, Sleep and Tag Detector.

The CR95HF can switch from one mode to another.

**Table 3. CR95HF operating modes and states**


| Mode                        | State        | Description   |
|-----------------------------|--------------|---|
| <b>Wait For Event (WFE)</b> | Power-up     | This mode is accessible directly after POR.<br>Low level on $\overline{\text{IRQ\_IN}}$ pin (longer than 10 $\mu\text{s}$ ) is the only wakeup source. LFO (low-frequency oscillator) is running in this state.                                   |
|                             | Hibernate    | Lowest power consumption state. The CR95HF has to be waken-up in order to communicate. Low level on $\overline{\text{IRQ\_IN}}$ pin (longer than 10 $\mu\text{s}$ ) is the only wakeup source.  |
|                             | Sleep        | Low power consumption state. Wakeup source is configurable:<br>– Timer<br>– $\overline{\text{IRQ\_IN}}$ pin<br>– $\overline{\text{SPI\_SS}}$ pin<br>LFO (low-frequency oscillator) is running in this state.                                      |
|                             | Tag Detector | Low power consumption state with tag detection. Wakeup source is configurable:<br>– Timer<br>– $\overline{\text{IRQ\_IN}}$ pin<br>– $\overline{\text{SPI\_SS}}$ pin<br>– Tag detector<br>LFO (low-frequency oscillator) is running in this state. |
| <b>Active</b>               | Power-up     | This mode is accessible directly after POR.<br>Low level on $\overline{\text{IRQ\_IN}}$ pin (longer than 10 $\mu\text{s}$ ) is the only wakeup source. LFO (low-frequency oscillator) is running in this state.                                   |
|                             | Hibernate    | Lowest power consumption state. The CR95HF has to be waken-up in order to communicate. Low level on $\overline{\text{IRQ\_IN}}$ pin (longer than 10 $\mu\text{s}$ ) is the only wakeup source.  |

Hibernate, Sleep and Tag Detector states can only be activated by a command from the external host (MCU). As soon as any of these three states are activated, the CR95HF can no longer communicate with the external host. It can only be woken up.

The behavior of the CR95HF in 'Tag Detector' state is defined by the Idle command.




Figure 4. CR95HF initialization and operating state change

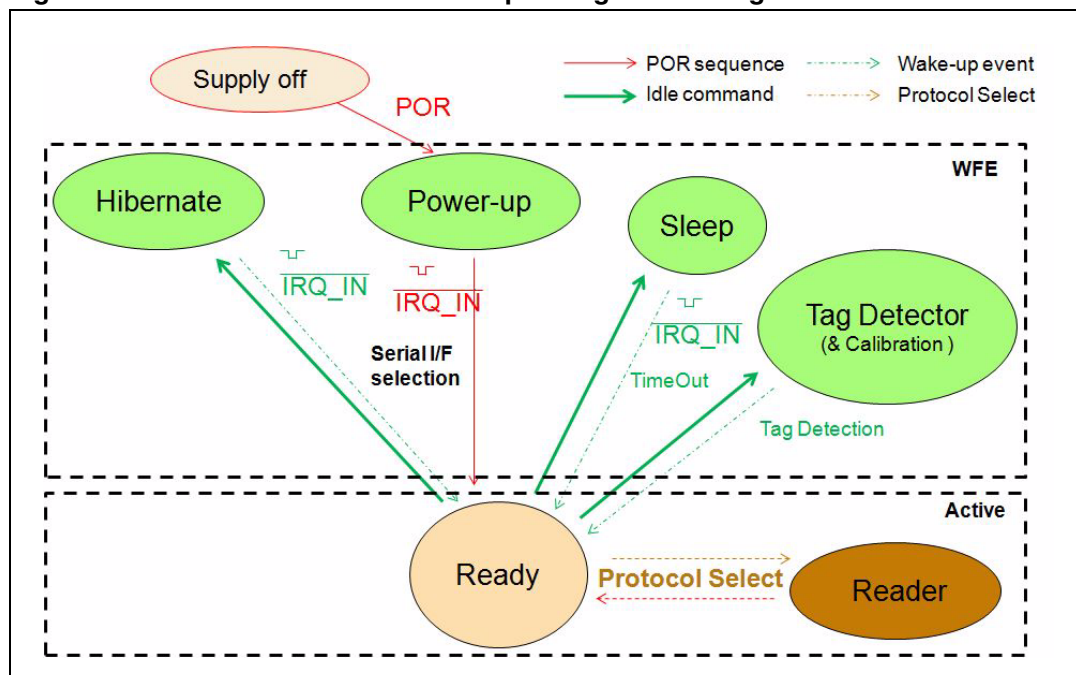

### 3.2 Startup sequence

After the power supply is established at power-on, the CR95HF waits for a low pulse on the pin  $\overline{\text{IRQ\_IN}}$  ( $t_1$ ) before automatically selecting the external interface (SPI or UART) and entering Ready state after a delay ( $t_3$ ).

Figure 5. Power-up sequence

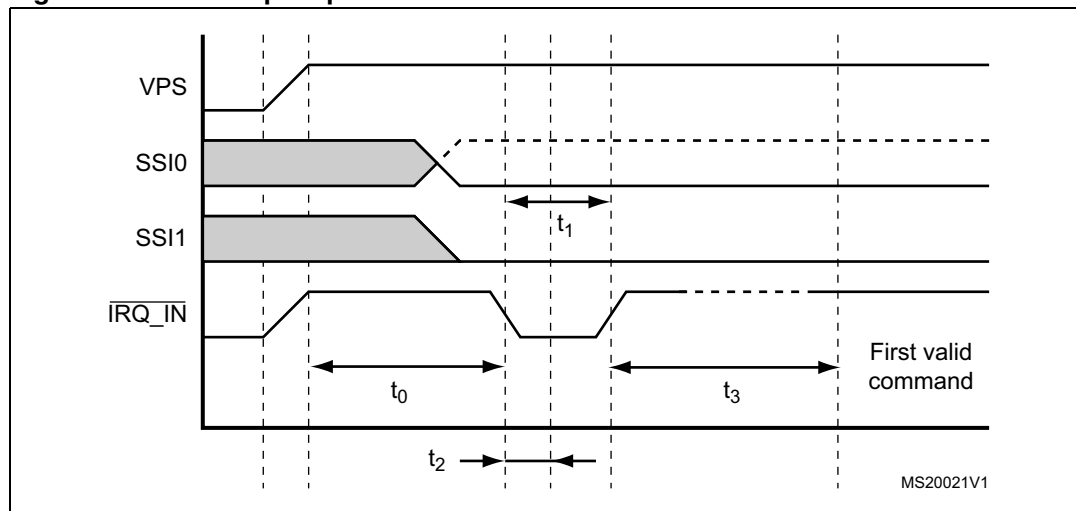

1. Note for pin SSIO: - - - SPI selected, ——— UART selected

Figure 5 shows the power-up sequence for a CR95HF device; where,

- $t_0$  is the initial wake-up delay 100  $\mu$ s (minimum)
- $t_1$  is the minimum interrupt width 10  $\mu$ s (minimum)
- $t_2$  is the delay for the serial interface selection 250 ns (typical)
- $t_3$  is the HFO setup time 3 ms (typical)

*Note:* The Serial Interface is selected after the following falling edge of pin  $\overline{IRQ\_IN}$  when leaving from POR or Hibernate state.

Table 4 lists the signal configuration used to select the serial communication interface.

**Table 4. Select serial communication interface selection table**


| Pin  | UART | SPI |
|------|------|-----|
| SSI0 | 0    | 1   |
| SSI1 | 0    | 0   |

## 4 Communication protocols

### 4.1 Universal asynchronous receiver/transmitter (UART)

The application sends commands to the CR95HF and waits for replies. Polling for readiness is not necessary. The default baud rate is 57600 baud. The maximum allowed baud rate is 2 Mbps.

**Figure 6. UART communication**

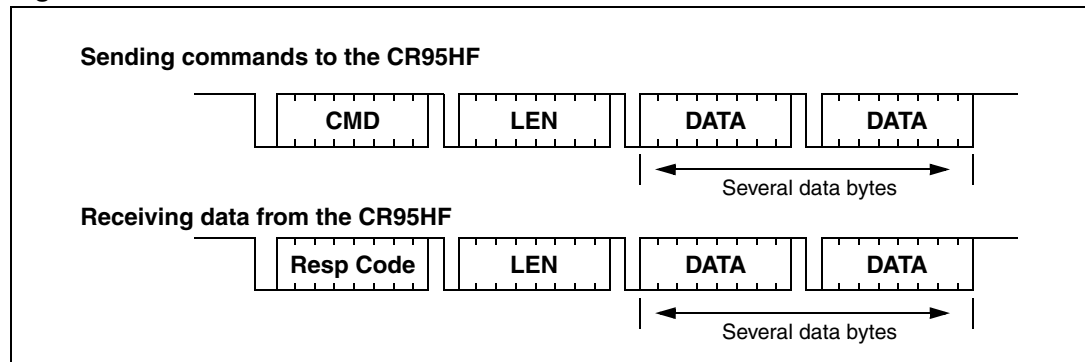


The value of the 'Length' field can be zero. In this case, no data must be sent.

The formats of send and receive packets are almost identical.

If an ECHO command is sent, only one byte (0x55) is sent.

[Figure 7](#) shows an example of an ECHO command.

**Figure 7. ECHO command example**

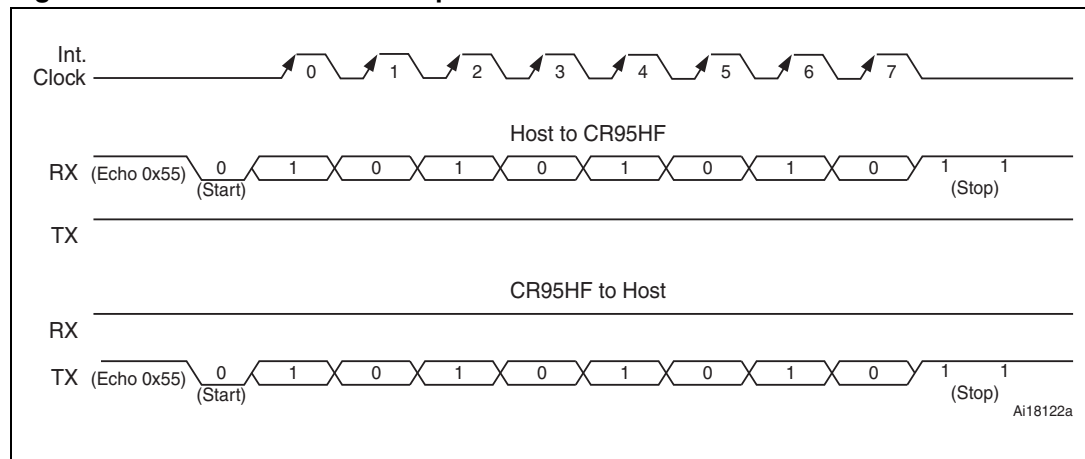

**Caution:** UART communication is LSB first. Stop bit duration is two Elementary Time Units (ETUs).

## 4.2 Serial peripheral interface (SPI)

### 4.2.1 Polling mode

In order to send commands and receive replies, the application software has to perform 3 steps.

1. Send the command to the CR95HF.
2. Poll the CR95HF until it is ready to transmit the response.
3. Read the response.

The application software should never read data from the CR95HF without being sure that the CR95HF is ready to send the response.

The maximum allowed communication speed is  $f_{\text{SCK}}$ .


A Control byte is used to specify a communication type and direction:

- 00: Send command to the CR95HF
- 11: Poll the CR95HF
- 10: Read data from the CR95HF
- 01: Reset the CR95HF


The  $\overline{\text{SPI\_SS}}$  line is used to select a device on the common SPI bus. The  $\overline{\text{SPI\_SS}}$  pin is active low.

When the  $\overline{\text{SPI\_SS}}$  line is inactive, all data sent by the Master device is ignored and the MISO line remains in High Impedance state.

**Figure 8. Sending command to CR95HF**

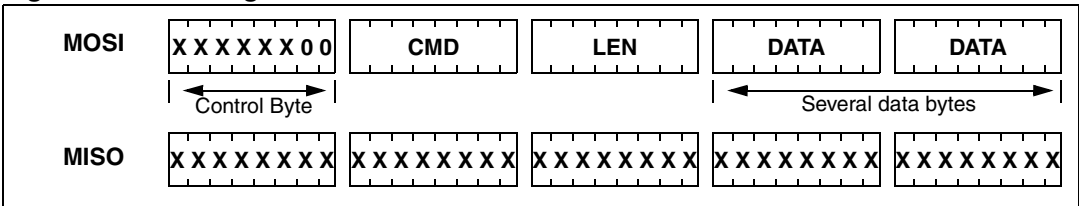


**Figure 9. Polling the CR95HF until it is ready**

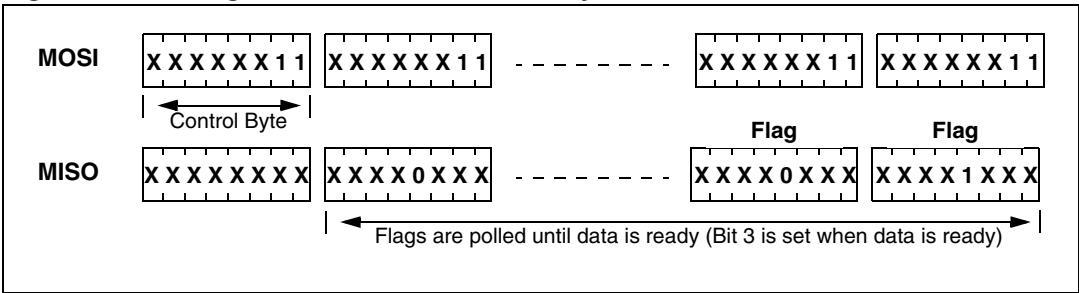

**Table 5. Interpretation of flags**

| Bit   | Meaning (Application point of view)        |
|-------|--|
| [7:4] | Not significant                            |
| 3     | Data can be read from the CR95HF when set. |
| 2     | Data can be sent to the CR95HF when set.   |
| [1:0] | Not significant                            |

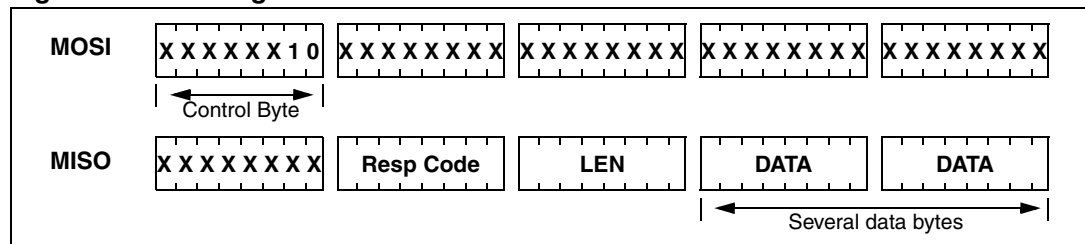**Figure 10. Reading data from CR95HF**

Data must be sampled at the rising edge of the SCK signal.

'Sending', 'Polling' and 'Reading' commands must be separated by a high level of the  $\overline{\text{SPI\_SS}}$  line. For example, when the application needs to wait for data from the CR95HF, it asserts the  $\overline{\text{SPI\_SS}}$  line low and issues a 'Polling' command. Keeping the  $\overline{\text{SPI\_SS}}$  line low, the Host can read the Flags Waiting bit which indicates that the CR95HF can be read. Then, the application has to assert the  $\overline{\text{SPI\_SS}}$  line high to finish the polling command. The Host asserts the  $\overline{\text{SPI\_SS}}$  line low and issues a 'Reading' command to read data. When all data is read, the application asserts the  $\overline{\text{SPI\_SS}}$  line high.

The application is not obliged to keep reading Flags using the Polling command until the CR95HF is ready in one command. It can issue as many 'Polling' commands as necessary. For example, the application asserts  $\overline{\text{SPI\_SS}}$  low, issues 'Polling' commands and reads Flags. If the CR95HF is not ready, the application can assert  $\overline{\text{SPI\_SS}}$  high and continue its algorithm (measuring temperature, communication with something else). Then, the application can assert  $\overline{\text{SPI\_SS}}$  low again and again issue 'Polling' commands, and so on, as many times as necessary, until the CR95HF is ready.

Note that at the beginning of communication, the application does not need to check flags to start transmission. The CR95HF is assumed to be ready to receive a command from the application.

**Figure 11. Reset the CR95HF**

To reset the CR95HF using the SPI, the application sends the SPI Reset command (Control Byte 01, see [Figure 11](#)) which starts the internal controller reset process and puts the CR95HF into Power-up state. The CR95HF will wake up when pin  $\overline{\text{IRQ\_IN}}$  goes low. The CR95HF reset process only starts when the  $\overline{\text{SPI\_SS}}$  pin returns to high level.

**Caution:** SPI communication is MSB first.

### 4.2.2 IRQ mode

When the CR95HF is configured to use the SPI serial interface, pin  $\overline{\text{IRQ\_OUT}}$  is used to give additional information to user. When the CR95HF is ready to send back a reply, it sends an Interrupt Request by setting a low level on pin  $\overline{\text{IRQ\_OUT}}$ , which remains low until the host reads the data.

The application can use the IRQ mode to skip the polling stage.

**Caution:** SPI communication is MSB first.

## 5 Commands

### 5.1 Command format

- Direction: Host to CR95HF  
<CMD><Len><Data>
- Direction: CR95HF to Host  
<RespCode><Len><Data>

Fields <Cmd>, <RespCode> and <Len> are always 1 byte long. <Data> can be from 0 to 255 bytes.

*Note:* The ECHO command is an exception as it has only one byte (0x55).

The following symbols correspond to:

- >>> Frame sent by the host to CR95HF
- <<< Frame sent by the CR95HF to the host

### 5.2 List of commands

[Table 6](#) summarizes the available commands.

**Table 6. List of CR95HF commands**

| Code        | Command        | Description   |
|-------------|----------------|---|
| 01          | IDN            | Requests short information about the CR95HF and its revision.   |
| 02          | PROTOCOLSELECT | Selects the communication protocol and specifies certain protocol-related parameters.   |
| 04          | SENDRECV       | Sends data using the previously selected protocol and receives the tag response.  |
| 07          | IDLE           | Switches the CR95HF into a low consumption Wait for Event (WFE) mode (Power-up, Hibernate, Sleep or Tag detection), specifies the authorized wake-up sources and waits for an event to exit to Ready state. |
| 08          | RdREG          | Reads Wake-up event register or the Analog Register Configuration (ARC_B) register.   |
| 09          | WRREG          | Writes Analog Register Configuration (ARC_B) register or writes index of ARC_B register address.  |
| 0A          | BAUDRATE       | Sets the UART baud rate.  |
| 55          | ECHO           | CR95HF performs a serial interface ECHO command (reply data 0x55 or stops the Listening state when a listen command has been sent without error).   |
| Other codes |                | ST Reserved   |

### 5.3 IDN command (0x01) description

The IDN command (0x01) gives brief information about the CR95HF and its revision.

**Table 7. IDN command description**

| Direction      | Data        | Comments                       | Example  |
|----------------|-------------|--------------------------------|--|
| Host to CR95HF | 0x01        | Command code                   | >>>0x0100  |
|                | 0x00        | Length of data                 |  |
| CR95HF to Host | 0x00        | Result code                    | <<<0x000F4E4643204653324A41535431004298<br><br>In this example,<br><<<0x4E4643204653324A4153543100: 'NFC FS2JAST1', #1<br>0x4298: CRC of ROM (real CRC may differ from this example) |
|                | <Len>       | Length of data                 |  |
|                | <Device ID> | Data in ASCII format           |  |
|                | <ROM CRC>   | CRC calculated for ROM content |  |

It takes approximately 6 ms to calculate the CRC for the entire ROM. The application must allow sufficient time for waiting for a response for this command.

### 5.4 Protocol Select command (0x02) description

This command selects the communication protocol and prepares the CR95HF for communication.

**Table 8. PROTOCOLSELECT command description**

| Direction      | Data         | Comments   | Example  |
|----------------|--------------|--|--|
| Host to CR95HF | 0x02         | Command code   | See <a href="#">Table 9: List of &lt;Parameters&gt; values for the ProtocolSelect command for different protocols on page 17</a> for a detailed example. |
|                | <Len>        | Length of data   |  |
|                | <Protocol>   | Protocol codes<br>00: Field OFF<br>01: ISO/IEC 15693<br>02: ISO/IEC 14443-A<br>03: ISO/IEC 14443-B<br>04: ISO/IEC 18092 / FeliCa |  |
|                | <Parameters> | Each protocol has a different set of parameters. See <a href="#">Table 9</a> .   |  |
| CR95HF to Host | 0x00         | Result code  | <<<0x0000  |
|                | 0x00         | Length of data   | Protocol is successfully selected  |
| CR95HF to Host | 0x82         | Error code   | <<<0x8200  |
|                | 0x00         | Length of data   | Invalid command length   |
| CR95HF to Host | 0x83         | Error code   | <<<0x8300  |
|                | 0x00         | Length of data   | Invalid protocol   |



Note that there is no 'Field ON' command. When the application selects a communication protocol, the field automatically switches ON.

When the application selects a protocol, the CR95HF performs all necessary settings: it will choose the appropriate reception and transmission chains, switch ON or OFF the RF field and connect the antenna accordingly.

Different protocols have different sets of parameters. Values for the <Parameters> field are listed in [Table 9](#).

**Table 9. List of <Parameters> values for the PROTOCOLSELECT command for different protocols**

| Protocol                     | Code | Parameters |     |   | Examples of commands   |
|------------------------------|------|------------|-----|---|--|
|                              |      | Byte       | Bit | Function  |  |
| Field OFF                    | 0x00 | 0          | 7:0 | RFU   | >>>0x02020000  |
| ISO/IEC 15693                | 0x01 | 0          | 7:6 | RFU   | H 100 S: >>>0x02 02 01 01<br>H 100 D: >>>0x02 02 01 03<br>H 10 S: >>>0x02 02 01 05<br>H 10 D: >>>0x02 02 01 07<br>L 100 S: >>>0x02 02 01 21<br>L 100 D: >>>0x02 02 01 23<br>L 10 S: >>>0x02 02 01 25<br>L 10 D: >>>0x02 02 01 27<br>In these examples, the CRC is automatically appended.  |
|                              |      |            | 5:4 | 00: 26 Kbps (H)<br>01: 52 Kbps<br>10: 6 Kbps (L)<br>11: RFU   |  |
|                              |      |            | 3   | 0: Respect 312-μs delay<br>1: Wait for SOF  |  |
|                              |      |            | 2   | 0: 100% modulation (100)<br>1: 10% modulation (10)  |  |
|                              |      |            | 1   | 0: Single subcarrier (S)<br>1: Dual subcarrier (D)  |  |
|                              |      |            | 0   | Append CRC if set to '1'.   |  |
| ISO/IEC 14443 Type A         | 0x02 | 0          | 7:6 | Transmission data rate<br>00: 106 Kbps<br>01: 212 Kbps <sup>(1)</sup><br>10: RFU<br>11: RFU   | >>>0x02020200: ISO/IEC 14443 Type A tag, 106 Kbps transmission and reception rates, Time interval 86/90<br><br>Note that REQA, WUPA, Select20 and Select70 commands use a fixed interval of 86/90 μs between a request and its reply. Other commands use a variable interval with fixed granularity. Refer to the ISO/IEC 14443 standard for more details. |
| NFC Forum Tag Type 1 (Topaz) |      |            | 5:4 | Reception data rate<br>00: 106 Kbps<br>01: 212 Kbps <sup>(1)</sup><br>10: RFU<br>11: RFU  |  |
| NFC Forum Tag Type 2         |      |            | 3   | RFU   |  |
| NFC Forum Tag Type 4A        |      |            | 2:0 | RFU   |  |
|                              |      | 1, 2       |     | AFDT (Optional) 2 bytes<br>0xPP 0xMM<br>Set the maximum CR95HF listening time so that it fits the maximum ISO FWT:<br>0xPP ≤0x0E,<br>0x01 ≤0xMM ≤0xFE | Frame Waiting Time (FWT) = $(256 \cdot 16/f_C) \cdot (2^{PP}) \cdot (MM+1)$<br><br>If AFDT is not specified, the default FWT is ~ 86 μs  |

**Table 9. List of <Parameters> values for the PROTOCOLSELECT command for different protocols (continued)**

| Protocol   | Code | Parameters |     |   | Examples of commands  |
|--|------|------------|-----|---|---|
|  |      | Byte       | Bit | Function  |   |
| ISO/IEC 14443 Type B<br><br>NFC Forum Tag Type 4B  | 0x03 | 0          | 7:6 | Transmission data rate<br>00: 106 Kbps<br>01: RFU<br>10: RFU<br>11: RFU   | >>>0x02020301:<br>ISO/IEC 14443 Type B tag with CRC appended  |
|  |      |            | 5:4 | Reception data rate<br>00: 106 Kbps<br>01: RFU<br>10: RFU<br>11: RFU  |   |
|  |      |            | 3:1 | RFU   |   |
|  |      |            | 0   | Append CRC if set to '1'.   |   |
|  |      | 1, 2       |     | AFDT (Optional) 2 bytes<br>0xPP 0xMM<br>Set the maximum CR95HF listening time so that it fits the maximum ISO FWT:<br>0xPP ≤0x0E,<br>0x01 ≤0xMM ≤0xFE | Frame Waiting Time (FWT) = $(256 \cdot 16 / f_C) \cdot (2^{PP}) \cdot (MM + 1)$<br><br>If AFDT is not specified, the default FWT is ~ 300 μs  |
|  |      |            |     |   |   |
| ISO/IEC 18092<br><br>NFC Forum Tag Type 3 (FeliCa) | 0x04 | 0          | 7:6 | Transmission data rate<br>00: RFU<br>01: 212 Kbps<br>10: 424 Kbps<br>11: RFU  | >>>0x02020451:<br>ISO/IEC18092 tag, 212 Kbps transmission and reception rates with CRC appended.<br><br>Parameter 'Slot counter' is not mandatory. If it is not present, it is assumed that SlotCounter = 0x00 (1 slot) |
|  |      |            | 5:4 | Reception data rate<br>00: RFU<br>01: 212 Kbps<br>10: RFU<br>11: RFU  |   |
|  |      |            | 3:1 | RFU   |   |
|  |      |            | 0   | Append CRC if set to '1'.   |   |
|  |      | 1          | 7:5 | RFU   | If slot counter = 0x10, the CR95HF does not respect reply timings, but polls incoming data and searches a valid response during ~8.4 ms.  |
|  |      |            | 4   | Disregard slot counter<br>0: Respect slot counter<br>1: Search for the reply  |   |
|  |      |            | 3:0 | Slot counter<br>0: 1 slot<br>1: 2 slots<br>...<br>F: 16 slots   |   |

1. Not characterized.

## 5.5 Send Receive (SendRecv) command (0x04) description

This command sends data and receives a reply.

Before sending this command, the application must select a protocol.

If the tag response was received and decoded correctly, the <Data> field can contain additional information which is protocol-specific. This is explained in [Table 11](#).

**Table 10. SENDRECV command description**

| Direction      | Data       | Comments  | Example   |
|----------------|------------|---|---|
| Host to CR95HF | 0x04       | Command code                                      | See <a href="#">Table 11</a> and <a href="#">Table 12</a> for detailed examples.  |
|                | <Len>      | Length of data                                    |   |
|                | <Data>     | Data to be sent                                   |   |
| CR95HF to Host | 0x80       | Result code                                       | <<<0x800F5077FE01B3000000000071718EBA00<br>The tag response is decoded. This is an example of an ISO/IEC 14443 ATQB response (Answer to Request Type B) |
|                | <Len>      | Length of data                                    |   |
|                | <Data>     | Data received. Interpretation depends on protocol |   |
| CR95HF to Host | 0x90       | Result code                                       | <<<0x900401 or 0x900405 (NAK)<br><<<0x90040A (ACK)<br>Exception for 4-bit frames.   |
|                | 0x04       | Valid bits  |   |
|                | ACK or NAK | ISO 14443-A ACK or NAK detection                  |   |
| CR95HF to Host | 0x86       | Error code  | <<<0x8600 Communication error   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x87       | Error code  | <<<0x8700 Frame wait time out or no tag   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x88       | Error code  | <<<0x8800 Invalid SOF   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x89       | Error code  | <<<0x8900 Receive buffer overflow (too many bytes received)   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x8A       | Error code  | <<<0x8A00 Framing error (start bit = 0, stop bit = 1)   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x8B       | Error code  | <<<0x8B00 EGT time out (for ISO/IEC 14443-B)  |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x8C       | Error code  | <<<0x8C00 Invalid length. Used in FeliCa, when field Length < 3   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x8D       | Error code  | <<<0x8D00 CRC error (Used in FeliCa protocol)   |
|                | 0x00       | Length of data                                    |   |
| CR95HF to Host | 0x8E       | Error code  | <<<0x8E00 Reception lost without EOF received   |
|                | 0x00       | Length of data                                    |   |

[Table 11](#) gives examples of communication between the CR95HF and a contactless tag. The CR95HF receives a SendRecv command (>>> 0x04...) from the host and returns its response to the host (<<< 0x80...). [Table 11](#) provides more details on the CR95HF response format.

**Table 11. List of <Data> Send values for the SENDRECV command for different protocols**

| Protocol                     | Explanation  | Response example |    |                  |    | Comments   |
|------------------------------|--|------------------|----|------------------|----|--|
| ISO/IEC 15693                | Send example   | 04               | 03 | 022000           |    | Example of an Inventory command using different protocol configuration:<br>Uplink: 100% ASK, 1/4 coding<br>Downlink: High data rate, Single sub-carrier<br><br>>>> 0x0403260100 (Inventory - 1 slot)<br><<< 0x800D0000CDE0406CD62902E0057900<br><br>If length of data is '0', only the EOF will be sent. This can be used for an anti-collision procedure. |
|                              | Command code   |                  |    |                  |    |  |
|                              | Length of entire data field  |                  |    |                  |    |  |
|                              | Data   |                  |    |                  |    |  |
| ISO/IEC 14443 Type A         | Send example   | 04               | 07 | 9370800<br>F8C8E | 28 | Example of an NFC Forum Type 2 request sequence:<br><br>>>>0x04022607 (REQA)<br><<<0x800544002800 (ATQA)<br>>>>0x0403932008 (Anti-collision CL1)<br><<<0x80088804A8D5F1280000 (UID CL1)...   |
|                              | Command code   |                  |    |                  |    |  |
|                              | Length of entire data field  |                  |    |                  |    |  |
|                              | Data   |                  |    |                  |    |  |
| NFC Forum Tag Type 4A        | Transmission flags:  |                  |    |                  |    | Example of an NFC Forum Type 1 (Topaz) request sequence:<br><br>>>>0x04022607 (REQA)<br><<<0x8005000C280000 (ATQ0 ATQ1)<br>>>>0x04087800000000000000A8 (RID)   |
| NFC Forum Tag Type 1 (Topaz) | 7: Topaz send format. Use EOF instead of P and use SOF at beginning of each byte. Pause between bytes and assume 1st byte is 7 bits. |                  |    |                  |    | <<<0x800B11486E567A003E45080000 (Header0 Header1 UID0 UID 1 UID2 UID3 CRC0 CRC1Significant bits indexColbyte IndexColbit)  |
| NFC Forum Tag Type 2         | 6: SplitFrame<br>5: Append CRC<br>4: RFU<br>[3:0]: 8 – number of significant bits in last byte                                       |                  |    |                  |    | Application SW must specify how many bits to send in the last byte. If flag SplitFrame is set, CR95HF will expect 8 – <significant bit count> bits in the 1 <sup>st</sup> byte during reception. Otherwise it expects 8 bits.<br><br>This command is useful for anti-collision.  |

**Table 11. List of <Data> Send values for the SENDRECV command for different protocols (continued)**

| Protocol   | Explanation                 | Response example |    |            | Comments  |
|--|-----------------------------|------------------|----|------------|---|
| ISO/IEC 14443 Type B<br><br>NFC Forum Tag Type 4B  | Send example                | 04               | 03 | 050000     | Example of an NFC Forum Type 4B request sequence:<br>>>>0x0403050000 (REQB)<br><<<0x800F5077FE01B30000000000<br>71718EBA00 (ATQB)                                   |
|  | Command code                |                  |    |            |   |
|  | Length of entire data field |                  |    |            |   |
|  | Data                        |                  |    |            |   |
| ISO/IEC 18092<br><br>NFC Forum Tag Type 3 (FeliCa) | Send example                | 04               | 05 | 00FFFF0000 | Example of an ISO/IEC 18092 / NFC Forum Type 3 (FeliCa) request sequence:<br>>>>0x040500FFFF0000 (REQC)<br><<<0x801201010102148E0DB41310<br>0B4B428485D0FF00 (ATQC) |
|  | Command code                |                  |    |            |   |
|  | Length of entire data field |                  |    |            |   |
|  | Data                        |                  |    |            |   |

**Table 12. List of <Data> Response values for the SENDRECV command for different protocols**

| Protocol      | Explanation  | Response example |    |            | Comments   |
|---------------|--|------------------|----|------------|--|
| ISO/IEC 15693 | Response example   | 80               | 08 | 0000000000 | This is a response on Read Single Block command for ISO/IEC 15693 TAG. Actual TAG response is <<<0x000000000077CF, other fields are added by the CR95HF. |
|               | Result code  |                  |    |            |  |
|               | Length of entire data field  |                  |    |            |  |
|               | Data received from tag   |                  |    |            |  |
|               | Original (received) value of CRC                                     |                  |    |            |  |
|               | [7:2]: RFU<br>1: CRC error if set<br>0: Collision is detected if set |                  |    |            |  |

**Table 12. List of <Data> Response values for the SENDRECV command for different protocols (continued)**

| Protocol  | Explanation  | Response example |    |                                  |      |    |    | Comments  |
|---|--|------------------|----|----------------------------------|------|----|----|---|
| ISO/IEC 14443 Type A<br><br>NFC Forum Tag Type 4A<br><br>NFC Forum Tag Type 1 (Topaz)<br><br>NFC Forum Tag Type 2 | Response example   | 80               | 09 | 80B30B8DB500                     | 00   | 00 | 00 | ISO/IEC 14443-A is bit oriented protocol, so we can receive non-integer amount of bytes. Number of significant bits in the 1 <sup>st</sup> byte is the same as indicated in the command sent.<br><br>To calculate a position of a collision, application has to take index of byte first. Index of bit indicates a position inside this byte. Note that both indexes start from 0 and bit index can be 8, meaning that collision affected parity.<br><br>Note that collision information is only valid when bit 'Collision is detected' is set. |
|   | Result code  |                  |    |                                  |      |    |    |   |
|   | Length of entire data field  |                  |    |                                  |      |    |    |   |
|   | Data received from TAG   |                  |    |                                  |      |    |    |   |
|   | 7: Collision is detected   |                  |    |                                  |      |    |    |   |
|   | 6: RFU   |                  |    |                                  |      |    |    |   |
|   | 5: CRC error   |                  |    |                                  |      |    |    |   |
| ISO/IEC 14443 Type B<br><br>NFC Forum Tag Type 4B   | 4: parity error  |                  |    |                                  |      |    |    |   |
|   | [3:0]: Shows how many significant bits are there in the first byte |                  |    |                                  |      |    |    |   |
|   | 7:0: Index of the first byte where collision is detected           |                  |    |                                  |      |    |    |   |
|   | [7:4]: RFU   |                  |    |                                  |      |    |    |   |
|   | [3:0]: Index of the first bit where collision is detected          |                  |    |                                  |      |    |    |   |
|   | Response example   | 80               | 0F | 5092036A8D0<br>00000000071<br>71 | 3411 |    | 00 |   |
|   | Result code  |                  |    |                                  |      |    |    |   |
| ISO/IEC 18092<br><br>NFC Forum Tag Type 3 (FeliCa)  | Length of entire data field  |                  |    |                                  |      |    |    | <<<0x801201010105017B<br>06941004014B024F4993F<br>F00   |
|   | Data received from tag   |                  |    |                                  |      |    |    |   |
|   | Original (received) value of CRC                                   |                  |    |                                  |      |    |    |   |
|   | [7:2]: RFU   |                  |    |                                  |      |    |    |   |
|   | 1: CRC error if set  |                  |    |                                  |      |    |    |   |
|   | 0: RFU   |                  |    |                                  |      |    |    |   |
|   | Response example   | 80               | 12 | 01010105017B0...93FF             |      |    | 00 |   |
| ISO/IEC 18092<br><br>NFC Forum Tag Type 3 (FeliCa)  | Result code  |                  |    |                                  |      |    |    |   |
|   | Length of entire data field  |                  |    |                                  |      |    |    |   |
|   | Data received from tag   |                  |    |                                  |      |    |    |   |
|   | [7:2]: RFU   |                  |    |                                  |      |    |    |   |
|   | 1: CRC error if set  |                  |    |                                  |      |    |    |   |
|   | 0: RFU   |                  |    |                                  |      |    |    |   |
|   | Response example   | 80               | 12 | 01010105017B0...93FF             |      |    | 00 |   |

For more detailed examples of use with NFC Forum and ISO/IEC 15693 tags, refer to [Appendix D on page 47](#).

## 5.6 Idle command (0x07) description

This command switches the CR95HF into low consumption mode and defines the way to return to Ready state.

The Result code contains the Wake-up flag register value indicating to the application the wake-up event that caused the device to exit WFE mode.

**Table 13. Idle command description**

| Direction      | Data  | Comments   | Example  |
|----------------|---|--|--|
| Host to CR95HF | 07  | Command code   | Example of switch from Active mode to Hibernate state:<br><br>>>>0x07 0E 08 04 00 04<br>00 18 00 00 00 00 00 00<br>00 00   |
|                | 0E  | Length of data   |  |
|                | <WU_Source>   | Specifies authorized wake-up sources and the LFO frequency   | Example of switch from Active to WFE mode (wake-up by low pulse on <u>IRQ_IN</u> pin):<br><br>>>>0x07 0E 08 01 00 38<br>00 18 00 00 00 00 00 00<br>00 00   |
|                | EnterCtrlL  | Settings to enter WFE mode   |  |
|                | EnterCtrlH  |  |  |
|                | WUCtrlL   | Settings to wake-up from WFE mode  | Example of switch from Active to WFE mode (wake-up by low pulse on <u>SPI_SS</u> pin):<br><br>>>>0x07 0E 10 01 00 38<br>00 18 00 00 00 00 00 00<br>00 00   |
|                | WUCtrlH   |  |  |
|                | LeaveCtrlL  | Settings to leave WFE mode (Default value = 0x1800)  | Example of wake-up by timeout (7 seconds):<br>Duration before Timeout = 256 * t <sub>L</sub> * (WU period + 2) * (MaxSleep + 1)<br><br>>>>0x07 0E 01 21 00 38<br>00 18 00 60 60 00 00 00<br>00 08  |
|                | LeaveCtrlH  |  |  |
|                | <WUPeriod>  | Period of time between two tag detection bursts. Also used to specify the duration before timeout.                         | Example of switch from Active to Tag Detector mode (wake-up by tag detection or low pulse on <u>IRQ_IN</u> pin) (32 kHz, inactivity duration = 272 ms, DAC oscillator = 3 ms, Swing = 63 pulses of 13.56 MHz):<br><br>>>>0x07 0E 0A 21 00 79<br>01 18 00 20 60 60 64 74<br>3F 08 |
|                | <OscStart>  | Defines the Wait time for HFO to stabilize: <OscStart> * t <sub>L</sub> (Default value = 0x60)                             |  |
|                | <DacStart>  | Defines the Wait time for DAC to stabilize: <DacStart> * t <sub>L</sub> (Default value = 0x60)                             | Example of a basic Idle command used during the Tag Detection Calibration process:<br><br>>>>0x07 0E 03 A2 00 F8<br>01 18 00 20 60 60 00 xx<br>3F 01<br>where xx is the DacDataH value.  |
|                | <DacDataL>  | Lower compare value for tag detection <sup>(1)</sup> .<br>This value must be set to 0x00 during tag detection calibration. |  |
|                | <DacDataH>  | Higher compare value for tag detection <sup>(1)</sup> .<br>This is a variable used during tag detection calibration.       |  |
|                | <SwingsCnt>   | Number of swings HF during tag detection (Default value = 0x3F)  |  |
| <MaxSleep>     | Max. number of tag detection trials before timeout <sup>(1)</sup> .<br>This value must be set to 0x01 during tag detection calibration.<br>Also used to specify duration before timeout.<br>MaxSleep must be:<br>0x00 < MaxSleep < 0x1F |  |  |

| Direction      | Data   | Comments              | Example  |
|----------------|--------|-----------------------|--|
| CR95HF to Host | 0x00   | Result code           | This response is sent only when CR95HF exits WFE mode.<br><<<0x000101 Wake-up by timeout<br><<<0x000102 Wake-up by tag detect<br><<<0x000108 Wake-up by low pulse on $\overline{\text{IRQ\_IN}}$ pin |
|                | 0x01   | Length of data        |  |
|                | <Data> | Data (Wake-up source) |  |
| CR95HF to Host | 0x82   | Error code            | <<<0x8200 Invalid command length   |
|                | 0x00   | Length of data        |  |

- ### 5.6.1 Idle command parameters

**Table 14. Idle command structure**

|              |             |           |               |            |               |           |           |           |          |             |           |
|--------------|-------------|-----------|---------------|------------|---------------|-----------|-----------|-----------|----------|-------------|-----------|
| 07           | 0E          | xx        | yy zz         | yy zz      | yy zz         | aa        | bb        | cc        | dd ee    | ff          | gg        |
| Command code | Data length | WU source | Enter Control | WU Control | Leave Control | WU Period | Osc Start | DAC Start | DAC Data | Swing Count | Max Sleep |

| Parameter     | Description   |
|---------------|---|
| Command code  | This byte is the command code. ‘07’ represents the Idle command. This command switches the device from Active mode to WFE mode.   |
| Data length   | This byte is the length of the command in bytes. Its value depends on the following parameter values.   |
| WU Source     | This byte defines the authorized wake-up sources in the Wake-up source register. Predefined values are:<br>01: Time out                                  02: Tag Detection<br>08: Low pulse on $\overline{\text{IRQ\_IN}}$ 10: Low pulse on $\overline{\text{SPI\_SS}}$ |
| Enter Control | These two bytes (EnterCtrlL and EnterCtrlH) define the resources when entering WFE mode.<br>0x0400: Hibernate<br>0x0100: Sleep (or 0x2100 if Timer source is enabled)<br>0xA200: Tag Detector Calibration<br>0x2100: Tag detection                                      |
| WU Control    | These two bytes (WuCtrlL and WuCtrlH) define the wake-up resources.<br>0x0400: Hibernate                                  0x3800: Sleep<br>0xF801: Tag Detector Calibration         0x7901: Tag detection   |



**Table 15. Summary of parameters (continued)**

| Parameter     | Description   |
|---------------|---|
| Leave Control | These two bytes (LeaveCtrlL and LeaveCtrlH) define the resources when returning to Ready state.<br>0x1800: Hibernate                      0x1800: Sleep<br>0x1800: Tag Detector Calibration    0x1800: Tag detection  |
| WU Period     | This byte is the coefficient used to adjust the time allowed between two tag detections. Also used to specify the duration before timeout. (Typical value: 0x20)<br>$\text{Duration before Timeout} = 256 * t_L * (\text{WU period} + 2) * (\text{MaxSleep} + 1)$   |
| Osc Start     | This byte defines the delay for HFO stabilization. (Recommended value: 0x60)<br>Defines the Wait time for HFO to stabilize: $\langle \text{OscStart} \rangle * t_L$   |
| DAC Start     | This byte defines the delay for DAC stabilization. (Recommended value: 0x60)<br>Defines the Wait time for DAC to stabilize: $\langle \text{DacStart} \rangle * t_L$   |
| DAC Data      | These two bytes (DacDataL and DacDataH) define the lower and higher comparator values, respectively. These values are determined by a calibration process.<br>When using the CR95HF demo board, these values should be set to approximately 0x64 and 0x74, respectively.  |
| Swing Count   | This byte defines the number of HF swings allowed during Tag Detection. (Recommended value: 0x3F)   |
| Max Sleep     | This byte defines the maximum number of tag detection trials or the coefficient to adjust the maximum inactivity duration before timeout.<br>MaxSleep must be: $0x00 < \text{MaxSleep} < 0x1F$<br>This value must be set to 0x01 during tag detection calibration.<br>Also used to specify duration before timeout.<br>$\text{Duration before Timeout} = 256 * t_L * (\text{WU period} + 2) * (\text{MaxSleep} + 1)$<br>(Typical value: 0x28) |

### 5.6.2 Using LFO frequency setting to reduce power consumption

In WFE mode, the high frequency oscillator (HFO) is stopped and most processes being executed are clocked by the low frequency oscillator (LFO). To minimize CR95HF power consumption in WFE mode, the slower the LFO frequency, the lower the power consumption.

### Example 1: Setting a lower LFO frequency

The following equation defines a basic timing reference:

$$t_{REF} = 256 \cdot t_L \text{ ms (where } t_L = 1/f_{LFO})$$

$t_{\text{REF}} = 8 \text{ ms}$  (when bits [7:6] are set to “00”, or 32 kHz)

$t_{\text{REF}} = 64 \text{ ms}$  (when bits [7:6] are set to “11”, or 4 kHz)

### 5.6.3 Optimizing wake-up conditions

Using the Wake-up source register, it is possible to cumulate sources for a wake-up event. It is strongly recommended to always set an external event as a possible wake-up source.

To cumulate wake-up sources, simply set the corresponding bits in the Wake-up source register. For example, to enable a wake-up when a tag is detected (bit 1 set to '1') or on a low pulse on pin  $\overline{\text{IRQ\_IN}}$  (bit 3 set to '1'), set the register to 0x0A.

### 5.6.4 Using various techniques to return to Ready state

The Idle command and reply set offers several benefits to users by enabling various methods to return the CR95HF to Ready state. Some methods are nearly automatic, such as waiting for a timer overflow or a tag detection, but others consume more power compared to the ones requesting a host action. A description of each method follows below.

#### Default setting: from POR to Ready state

After power-on, the CR95HF enters Power-up state.

To wake up the CR95HF and set it to Ready state, the user must send a low pulse on the  $\overline{\text{IRQ\_IN}}$  pin. The CR95HF then automatically selects the external interface (SPI or UART) and enters Ready state and is able to accept commands after a delay of approximately 3 ms.

#### From Ready state to Hibernate state and back to Ready state

In Hibernate state, most resources are switched off to achieve an ultra-low power consumption.

The only way the CR95HF can wake-up from Hibernate state is by an external event (low pulse on pin  $\overline{\text{IRQ\_IN}}$ ).

A basic Idle command is:

```
>>>0x07 0E 08 04 00 04 00 18 00 00 00 00 00 00 00
```

*Note:* The Wake-up flag value is NOT significant when returning to Ready state from Hibernate state or after a POR.

#### From Ready state to Sleep state and back to Ready state

Wake-up by external event (low pulse on  $\overline{\text{IRQ\_IN}}$  or  $\overline{\text{SPI\_SS}}$  pin)

In Sleep or Power-up states, operating resources are limited in function of the selected wake-up source to achieve a moderate power consumption level.

An Idle command example when wake-up source is pin  $\overline{\text{IRQ\_IN}}$ :

```
>>>0x07 0E 08 01 00 38 00 18 00 00 60 00 00 00 00
```

A similar command can be implemented using pin  $\overline{\text{SPI\_SS}}$  as a wake-up source:

```
>>>0x07 0E 10 01 00 38 00 18 00 00 60 00 00 00 00
```

Wake-up by Timeout

The LFO is required to use the timer. However, this increases the typical power consumption by 80  $\mu\text{A}$ . Several parameters can be modified to reduce power consumption as much as possible.

The Duration before Timeout is defined by parameters WU period and MaxSleep, respectively 0x60 and 0x08 in the following example.

Duration before Timeout =  $256 * t_L * (\text{WU period} + 2) * (\text{MaxSleep} + 1)$

*Note:* *Note that:  $0x00 < \text{MaxSleep} < 0x1F$ .*

An Idle command example when wake-up source is timer (0x01) when  $f_{LFO} = 32 \text{ kHz}$  (mean power consumption is 25  $\mu\text{A}$ )

```
>>>0x07 0E 01 21 00 38 00 18 00 60 60 00 00 00 00 08
```

An Idle command example when wake-up source is timer (0xC1) when  $f_{LFO} = 4 \text{ kHz}$  (mean power consumption is 20  $\mu\text{A}$ ):

```
>>>0x07 0E C1 21 00 38 00 18 00 60 60 00 00 00 00 08
```

The same command can be used mixing a timer and the  $\overline{\text{IRQ\_IN}}$  pin (0xC9) as a wake-up source:

```
>>>0x07 0E C9 21 00 38 00 18 00 60 60 00 00 00 00 08
```

#### Wake-up by Tag Detection

In this mode, the typical consumption can greatly vary in function of parameter settings (WU period without RF activity and Swing Count defining the RF burst duration). Using default settings, consumption in the range of 100  $\mu\text{A}$  can be achieved.

Tag Detector is a state where CR95HF is able to detect an RF event, a wake-up will occur when a tag sufficiently modifies the antenna load and is detected by the CR95HF.

An Idle command example when wake-up source is Tag Detection (0x02):

```
>>>0x07 0E 02 21 00 79 01 18 00 20 60 60 64 74 3F 08
```

The same command can be used mixing Tag Detection and the  $\overline{\text{IRQ\_IN}}$  pin (0x0A) as a wake-up source:

```
>>>0x07 0E 0A 21 00 79 01 18 00 20 60 60 64 74 3F 08
```

The tag detection sequence is defined by dedicated parameters:

- WU source (Byte 3) ([Wake-up source register on page 42](#))
  - The Timeout bit (bit 0) must be set to '1' in order to manage a certain number of emitted bursts. Otherwise, bursts will be sent indefinitely until a stop event occurs (for example, tag detection or a low pulse on pin  $\overline{\text{IRQ\_IN}}$ ).
  - The Tag Detect bit (bit 1) must be set to '1' to enable RF burst emissions.
  - It is recommended to also set Bits 3 or 4 to '1' to ensure that it is possible to leave Tag Detect mode via an external event (for example, a low pulse on pin  $\overline{\text{IRQ\_IN}}$ ).
- WU period (Byte 10): Defines the period of inactivity ( $t_{\text{INACTIVE}}$ ) between two RF bursts:
 
$$t_{\text{INACTIVE}} = (\text{WuPeriod} + 2) * t_{\text{REF}}$$
- OscStart, DacStart (Bytes 11 and 12): Define the set-up time of the HFO and Digital Analog Converter, respectively. In general, 3 ms is used both set-up times.
 
$$\text{HFO | DAC set-up time} = (\text{OscStart | DacStart}) * t_L$$
- DacDataL, DacDataH (Bytes 13 and 14): Reference level for Tag Detection (calculated during the tag detection calibration process).
- SwingsCnt (Byte 15): Represents the number of 13.56-MHz swing allowed during a Tag Detection burst. We recommend using 0x3F.

- Maxsleep (Byte 16): The CR95HF emits (MaxSleep + 1) bursts before leaving Tag Detection mode if bit 0 (Timer Out) of the WU source register is set to '1'. Otherwise, when this bit is set to '0', a burst is emitted indefinitely.

*Note:* Bytes 4 to 9 should be used as shown in the examples in [Section 5.6: Idle command \(0x07\) description](#).

*Note that the MaxSleep value is coded on the 5 least significant bits, thus:*  
 $0x00 < \text{MaxSleep} < 0x1F$ .

All the previously described command parameters must be chosen accordingly for the initial tag detection calibration when setting up the CR95HF.

Their value will impact tag detection efficiency, and CR95HF power consumption during Tag Detection periods.

### 5.6.5 Tag detection calibration procedure

The Idle command allows the use of a tag detection as a wake-up event. Certain parameters of the Idle command are dedicated to setting the conditions of a tag detection sequence.

During the tag detection sequence, the CR95HF regularly emits RF bursts and measures the current in the antenna driver  $I_{\text{DRIVE}}$  using the internal 6-bit DAC.

When a tag enters the CR95HF antenna RF operating volume, it modifies the antenna loading characteristics and induces a change in  $I_{\text{DRIVE}}$ , and consequently, the DAC data register reports a new value.

This value is then compared to the reference value established during the tag detection calibration process. This enables the CR95HF to decide if a tag has entered or not its operating volume.

The reference value (DacDataRef) is established during a tag detection calibration process using the CR95HF application setting with no tag in its environment.

The calibration process consists in executing a tag detection sequence using a well-known configuration, with no tag within the antenna RF operating volume, to determine a specific reference value (DacDataRef) that will be reused by the host to define the tag detection parameters (DacDataL and DacDataH).

During the calibration process, DacDataL is forced to 0x00 and the software successively varies the DacDataH value from its maximum value (0xFE) to its minimum value (0x00). At the end of the calibration process, DacDataRef will correspond to the value of DacDataH for which the wake-up event switches from timeout (no tag in the RF field) to tag detected.

To avoid too much sensitivity of the tag detection process, we recommend using a guard band. This value corresponds to 2 DAC steps (0x08).

Recommended guard band value:

$$\text{DacDataL} = \text{DacDataRef} - \text{Guard} \text{ and } \text{DacDataH} = \text{DacDataRef} + \text{Guard}$$

The parameters used to define the tag detection calibration sequence (clocking, set-up time, burst duration, etc.) must be the same as those used for the future tag detection sequences.

When executing a tag detection sequence, the CR95HF compares the DAC data register value to the DAC Data parameter values (DacDataL and DacDataH) included in the Idle command. The CR95HF will exit WFE mode through a Tag Detection event if the DAC data register value is greater than the DAC Data parameter high value (DacDataH) or less than

the DAC Data parameter low value (DacDataL). Otherwise, it will return to Ready state after a timeout.

An efficient 8-step calibration algorithm is described in [Example of tag detection calibration process on page 43](#).

An example of a basic Idle command used during the Tag Detection Calibration process:

```
>>>0x07 0E 03 A2 00 F8 01 18 00 20 60 60 00 xx 3F 01
```

where xx is the DacDataH value.

An example of a tag detection sequence is provided in [Example of tag detection command using results of tag detection calibration on page 46](#).

## 5.7 Read Register (RdReg) command (0x08) description

This command is used to read the Wakeup register.

**Table 16. RdREG command description**

| Direction      | Data                      | Comments                    | Example   |
|----------------|---------------------------|-----------------------------|---|
| Host to CR95HF | 0x08                      | Command code                | Ex 1. >>>0x0803690100<br>Reads the ARC_B register. <sup>(1)</sup><br><br>Ex 2. >>>0x0803620100<br>Reads the Wake-up event register. |
|                | 0x03                      | Length of data              |   |
|                | 0x62 or 0x69<br>other RFU | Register address            |   |
|                | 0x01                      | Register size               |   |
|                | 0x00                      | ST Reserved                 |   |
| CR95HF to Host | 0x00                      | Result code                 | <<<0x000101 Wake-up by timeout (Ex. 1)<br><<<0x000102 Wake-up by tag detect (Ex. 1)<br><br><<<0x000113 Depth = 1, Gain = 3 (Ex. 2)  |
|                | <Len>                     | Length of data (= RegCount) |   |
|                | <RegData>                 | Register data               |   |
| CR95HF to Host | 0x82                      | Error code                  | <<<0x8200 Invalid command length  |
|                | 0x00                      | Length of data              |   |

1. This command must be preceded by the setting of the ARC\_B register index (0x0903680001) .

**Note:** *The Management of the Analog Register Configuration register (ARC\_B) is described in [Section 5.8: Write Register \(WrReg\) command \(0x09\) description](#).*

## 5.8 Write Register (WrReg) command (0x09) description

The Write Register (WRREG) command (0x09) is used to set the Analog Register Configuration address index value before reading or overwriting the Analog Register Configuration register (ARC\_B) value.

**Table 17. WRREG command description**

| Direction      | Data         | Comments  | Example   |
|----------------|--------------|---|---|
| Host to CR95HF | 0x09         | Command code  | >>>0x090468010113<br>Update ARC_B value to 0x13 |
|                | 0x03 or 0x04 | Length of data  |   |
|                | 0x68         | Analog Register Configuration address index                                       |   |
|                | 0x01         | Flag Increment address after write command  |   |
|                | 0x01         | Index pointing to the Modulation Depth and Receiver Gain values in ARC_B register |   |
|                | 0xXX         | New value for Modulation Depth and Receiver Gain nibbles                          |   |
| CR95HF to Host | 0x00         | Result code   | <<<0x0000                                       |
|                | 0x00         | Length of data (= RegCount)   | Register written                                |

1. This command must be executed before reading the ARC\_B register (0x0803690100).

### 5.8.1 Improving RF performance

Adjusting the Modulation Depth and Receiver Gain parameters helps adjust application behavior. These parameters are the two nibbles of the Analog Register Configuration register (ARC\_B).

The default value of these parameters ([Table 20](#)) is set by the PROTOCOLSELECT command, but they can be overwritten using the Write Register (WRREG) command (0x09). [Table 18](#) and [Table 19](#) list possible values for the Modulation Depth and Receiver Gain parameters respectively.

This new configuration is valid until a new PROTOCOLSELECT or Write Register (of register ARC\_B) command is executed. Register values are cleared at power off.

#### Example 2: How to modify Analog Register Configuration register (ARC\_B) values

- Use the PROTOCOLSELECT command (0x02) to select the correct communication protocol.

For example, to select the ISO/IEC 18092 (FeliCa) protocol:

```
Send PROTOCOLSELECT command: >>>0x02020451
CR95HF reply: <<<0x0000
```

- Read the Analog Register Configuration register (ARC\_B) value.

- Write the ARC\_B register index at 0x01: >>>0x0903680001  
CR95HF reply: <<<0x0000
- Read the ARC\_B register value: >>>0x0803690100  
CR95HF reply: <<<0x015F

In this example, the ARC\_B register value is 0x5F, where “5” is the Modulation Depth and “F” is the Receiver Gain.

3. Modify the Modulation Depth and Receiver Gain values with 0x23.
 

Write the ARC\_B register index: >>>0x090468010123  
 CR95HF reply: <<<0x0000
4. Read the Analog Configuration register (ARC\_B) value.
  - a) Write the ARC\_B register index at 0x01: >>>0x0903680001  
 CR95HF reply: <<<0x0000
  - b) Read the ARC\_B register value: >>>0x0803690100  
 CR95HF reply: <<<0x0123

### Modulation Depth and Receiver Gain values

**Table 18. Possible Modulation Depth values**

| Code                            | 1   | 2   | 3   | 4   | 5   | 6   | D   |
|---------------------------------|-----|-----|-----|-----|-----|-----|-----|
| Modulation Depth <sup>(1)</sup> | 10% | 17% | 25% | 30% | 33% | 36% | 95% |

1. Characterized only using ISO/IEC 10373 test set-up.

**Table 19. Possible Receiver Gain values**

| Code                         | 0     | 1     | 3     | 7     | F    |
|------------------------------|-------|-------|-------|-------|------|
| Receiver Gain <sup>(1)</sup> | 34 dB | 32 dB | 27 dB | 20 dB | 8 dB |

1. Characterized by design simulation.

### Default code per protocol

**Table 20. Default code for available reader protocols**

| Communication protocol        | Default value (FW Rev 1.1) | Recommended values for CR95HF demo board | Possible Modulation Depth values (MS nibble) | Possible Receiver Gain values (LS nibble) |
|-------------------------------|----------------------------|--|--|---|
| ISO/IEC 14443 Type A reader   | 0xDF                       | 0xD3                                     | 0xD  | 0x1, 0x3, 0x7 or 0xF                      |
| ISO/IEC 14443 Type B reader   | 0x2F                       | 0x23                                     | 0x1, 0x2, 0x3 or 0x4                         | 0x1, 0x3, 0x7 or 0xF                      |
| ISO/IEC 18092 (FeliCa) reader | 0x5F                       | 0x23                                     | 0x1, 0x2, 0x3 or 0x4                         | 0x1, 0x3, 0x7 or 0xF                      |
| ISO/IEC 15693 reader 30%      | 0x53                       | 0x53                                     | 0x4, 0x5 or 0x6                              | 0x1, 0x3, 0x7 or 0xF                      |
| ISO/IEC 15693 reader 100%     | 0xD3                       | 0xD3                                     | 0xD  | 0x1, 0x3, 0x7 or 0xF                      |

## 5.9 BaudRate command (0x0A) description

This command changes the UART baud rate.

**Table 21. BAUDRATE command description**

| Direction      | Data       | Comments   | Example                                   |
|----------------|------------|--|---|
| Host to CR95HF | 0x0A       | Command code   |   |
|                | 0x01       | Length of data   |   |
|                | <BaudRate> | New Baud Rate =<br>$13.56 / (2^{*} \text{<BaudRate>} + 2)$ Mbps<br>Baud rate<br>255: 13.56/512 ~26.48 Kbps<br>254: 13.56/510 ~26.59 Kbps<br>253: 13.56/508 ~26.7 Kbps<br>...<br>117: 13.56/236 ~57.7 Kbps (Value after power-up)<br>...<br>2: 13.56/6 ~2.26 Mbps<br>1: RFU<br>0: RFU |   |
| CR95HF to Host | 0x55       | Code response of 0x55  | <<<0x55<br>New baud rate is used to reply |

**Caution:** If the BaudRate command is not correctly executed, the baud rate value will remain unchanged.

## 5.10 Echo command (0x55) description

The ECHO command verifies the possibility of communication between a Host and the CR95HF.

**Table 22. command description**

| Direction      | Data | Comments      | Example  |
|----------------|------|---------------|--|
| Host to CR95HF | 0x55 | Command code  |  |
| CR95HF to Host | 0x55 | code response | <<<0x55 : response to ECHO command<br><<<0x558500 : response to ECHO command when the STRFNCA is in Listening mode |



## 6 Electrical characteristics

### 6.1 Absolute maximum ratings

**Table 23. Absolute maximum ratings**

| Symbol                          | Parameter  | Value                 | Unit |
|---------------------------------|--|-----------------------|------|
| VPS_Main                        | Supply voltage   | −0.3 to 7.0           | V    |
| VPS_TX                          | Supply voltage (RF drivers)  | −0.3 to 7.0           | V    |
| V <sub>IO</sub>                 | Input or output voltage relative to ground                                 | −0.3 to VPS_Main +0.3 | V    |
| V <sub>MaxCarrier</sub>         | Maximum input voltage (pins RX1 and RX2)                                   | ±14.0                 | V    |
| T <sub>A</sub>                  | Ambient operating temperature  | −25 to +85            | °C   |
|                                 | Ambient operating temperature (RF mode)                                    | −25 to +85            |      |
| T <sub>STG</sub>                | Storage temperature (Please also refer to package specification).          | −65 to +150           | °C   |
| V <sub>ESD</sub>                | Electrostatic discharge voltage according to JESD22-A114, Human Body Model | 2000                  | V    |
| P <sub>TOT</sub> <sup>(1)</sup> | Total power dissipation per package  | 0.5                   | W    |

1. Depending on the thermal resistance of package.

**Note:** *Stresses listed above may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of the specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.*

## 6.2 DC characteristics

**Table 24. DC characteristics (VPS\_Main = 3V±10% and VPS\_TX = 3V±10%)**

| Symbol          | Parameter                   | Condition                   | Min.                  | Typ. | Max.            | Unit |
|-----------------|-----------------------------|-----------------------------|-----------------------|------|-----------------|------|
| VPS_Main        | Supply voltage              |                             | 2.7                   | 3.0  | 3.3             | V    |
| VPS_TX          | Supply voltage (RF drivers) |                             | 2.7                   | 3.0  | 3.3             | V    |
| V <sub>IL</sub> | Input low voltage (I/Os)    |                             | 0                     |      | 0.2 x VPS_Main  | V    |
| V <sub>IH</sub> | Input high voltage (I/Os)   |                             | 0.7 x V <sub>CC</sub> |      | VPS_Main        | V    |
| V <sub>OH</sub> | Output high voltage (I/Os)  | I <sub>OH</sub> = - 8 µA    | 0.7 x V <sub>CC</sub> |      | VPS_Main        | V    |
| V <sub>OL</sub> | Output low voltage (I/Os)   | I <sub>OLMAX</sub> = 500 µA | 0                     |      | 0.15 x VPS_Main | V    |
| POR             | Power-on reset voltage      |                             |                       | 1.8  |                 | V    |

**Table 25. DC characteristics (VPS\_Main = 3V±10% and VPS\_TX = 5V±10%)**

| Symbol          | Parameter                   | Condition                   | Min.                  | Typ. | Max.            | Unit |
|-----------------|-----------------------------|-----------------------------|-----------------------|------|-----------------|------|
| VPS_Main        | Supply voltage              |                             | 2.7                   | 3.0  | 3.3             | V    |
| VPS_TX          | Supply voltage (RF drivers) |                             | 4.5                   | 5.0  | 5.5             | V    |
| V <sub>IL</sub> | Input low voltage (I/Os)    |                             | 0                     |      | 0.2 x VPS_Main  | V    |
| V <sub>IH</sub> | Input high voltage (I/Os)   |                             | 0.7 x V <sub>CC</sub> |      | VPS_Main        | V    |
| V <sub>OH</sub> | Output high voltage (I/Os)  | I <sub>OH</sub> = - 8 µA    | 0.7 x V <sub>CC</sub> |      | VPS_Main        | V    |
| V <sub>OL</sub> | Output low voltage (I/Os)   | I <sub>OLMAX</sub> = 500 µA | 0                     |      | 0.15 x VPS_Main | V    |
| POR             | Power-on reset voltage      |                             |                       | 1.8  |                 | V    |

## 6.3 Power consumption characteristics

$T_A = -25^{\circ}\text{C}$  to  $85^{\circ}\text{C}$ , unless otherwise specified.

**Table 26. Power consumption characteristics (VPS\_Main from 2.7 to 3.3 V)**

| Symbol                          | Parameter                                    | Condition   | Typ. | Max. | Unit          |
|---------------------------------|--|---|------|------|---------------|
| $I_{CC} (V_{PS})$<br>Power-up   | Supply current in power-up state             | $T_A = 25^{\circ}\text{C}$                                | 100  |      | $\mu\text{A}$ |
| $I_{CC} (V_{PS})$<br>Hibernate  | Supply current in Hibernate state            | $T_A = 25^{\circ}\text{C}$                                | 10   |      | $\mu\text{A}$ |
| $I_{CC} (V_{PS})$ Sleep         | Supply current in Sleep state                | $T_A = 25^{\circ}\text{C}$                                | 20   |      | $\mu\text{A}$ |
| $I_{CC} (V_{PS})$ Ready         | Supply current in Ready state                | $T_A = 25^{\circ}\text{C}$                                | 2.5  |      | $\text{mA}$   |
| $I_{CC} (V_{PS})$ Tag<br>Detect | Average supply current in Tag Detector state | $T_A = 25^{\circ}\text{C}$ ,<br>4 RF bursts<br>per second | 100  |      | $\mu\text{A}$ |

The CR95HF supports two VPS\_TX supply ranges for RF drivers: 2.7V to 3.3V or 4.5V to 5.5V. Antenna matching circuit must be defined accordingly .

**Table 27. Power consumption characteristics (VPS\_TX from 2.7 to 3.3 V)**

| Symbol  | Parameter   | Condition                  | Typ. | Max. | Unit          |
|---|---|----------------------------|------|------|---------------|
| $I_{CC} \text{ RF } (V_{PS\_TX})$<br>RF Field ON  | Supply current in RF Field (Reader mode) <sup>(1)</sup> | $T_A = 25^{\circ}\text{C}$ | 70   |      | $\text{mA}$   |
| $I_{CC} \text{ RF } (V_{PS\_TX})$<br>RF Field OFF | Supply current in RF Field (Reader mode)                | $T_A = 25^{\circ}\text{C}$ | 1    |      | $\mu\text{A}$ |
| $I_{CC} \text{ RF } (V_{PS\_TX})$<br>Tag Detect   | Peak current during Burst detection                     | $T_A = 25^{\circ}\text{C}$ | 70   |      | $\text{mA}$   |

1. Parameter measured using recommended output matching network.

**Table 28. Power consumption characteristics (VPS\_TX from 4.5 to 5.5 V)**

| Symbol  | Parameter   | Condition                  | Typ. | Max. | Unit          |
|---|---|----------------------------|------|------|---------------|
| $I_{CC} \text{ RF } (V_{PS\_TX})$<br>RF Field ON  | Supply current in RF Field (Reader mode) <sup>(1)</sup> | $T_A = 25^{\circ}\text{C}$ | 200  |      | $\text{mA}$   |
| $I_{CC} \text{ RF } (V_{PS\_TX})$<br>RF Field OFF | Supply current in RF Field (Reader mode)                | $T_A = 25^{\circ}\text{C}$ | 5    |      | $\mu\text{A}$ |
| $I_{CC} \text{ RF } (V_{PS\_TX})$<br>Tag Detect   | Peak current during Burst detection                     | $T_A = 25^{\circ}\text{C}$ | 200  |      | $\text{mA}$   |

1. Parameter measured using recommended output matching network.

## 6.4 SPI characteristics

The CR95HF supports (CPOL = 0, CPHA = 0) and (CPOL = 1, CPHA = 1) modes.

**Table 29. SPI interface characteristics**

| Symbol                       | Parameter                                     | Condition         | Min. | Max. | Unit     |
|------------------------------|---|-------------------|------|------|----------|
| $f_{SCK}$<br>1/ $t_{c(SCK)}$ | SPI clock frequency                           |                   |      | 2.0  | MHz      |
| $V_{IL}$                     | Input low voltage                             |                   |      | 0.3  | $V_{PS}$ |
| $V_{IH}$                     | Input high voltage                            |                   | 0.7  |      |          |
| $V_{OL}$                     | Output low voltage                            |                   |      | 0.4  |          |
| $V_{OH}$                     | Output high voltage                           |                   | 0.7  |      |          |
| $t_{SU(NSS)}^{(1)}$          | NSS setup time                                |                   | 70   |      | ns       |
| $t_{h(NSS)}^{(1)}$           | NSS hold time                                 |                   | 0    |      |          |
| $t_{CH(SCKL)}^{(1)}$         | Clock low time                                |                   | 200  |      | ns       |
| $t_{CH(SCKH)}^{(1)}$         | Clock high time                               |                   | 200  |      |          |
| $t_{SU(SI)}^{(1)}$           | Data slave Input setup time                   |                   | 20   |      | ns       |
| $t_{h(SI)}^{(1)}$            | Data slave Input hold time                    |                   |      | 80   |          |
| $t_{v(SO)}^{(1)}$            | Data slave output valid time                  |                   | 150  |      | ns       |
| $t_{h(SO)}^{(1)}$            | Data slave output hold time                   | After enable edge | 280  |      |          |
| $C_{b\_SPI\_IN}$             | Capacitive load for input pins NSS, CLK, MOSI |                   |      | 3    | pF       |
| $C_{b\_SPI\_OUT}$            | Capacitive load for input pins MOSI           |                   |      | 20   | pF       |

1. Values based on design simulation and/or characterization results, and not on tested in production.

**Figure 12. SPI timing diagram (Slave mode and CPOL = 0, CPHA = 0)**


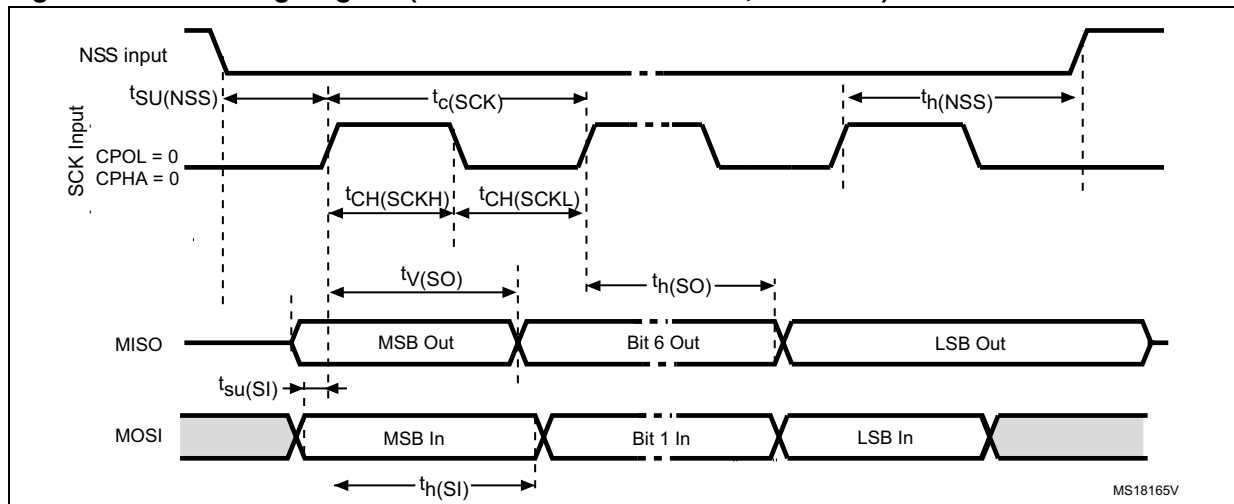


Figure 13. SPI timing diagram (Slave mode and CPOL = 1, CPHA = 1)

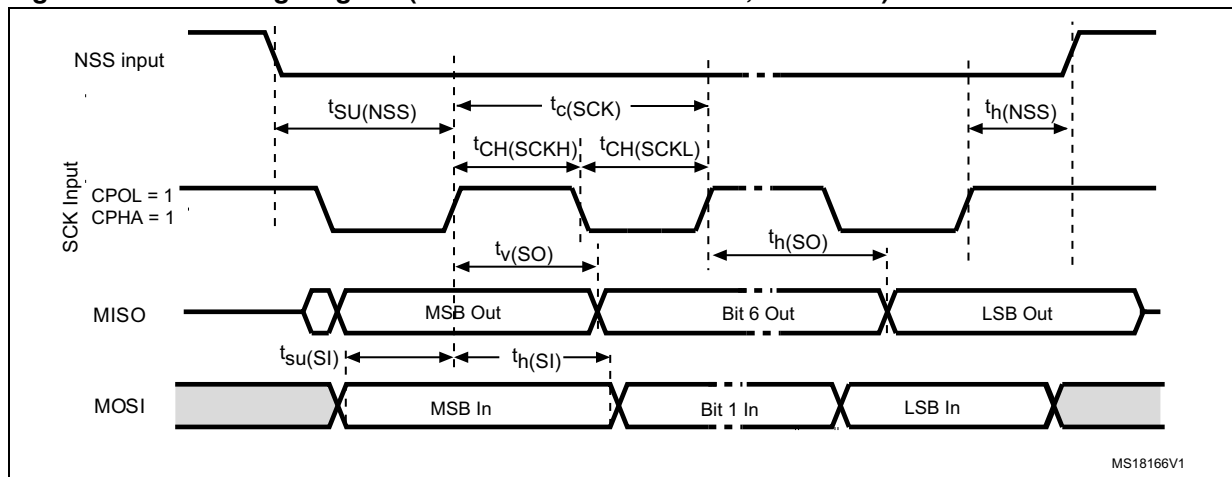

## 6.5 RF characteristics

Test conditions are  $T_A = 0^\circ\text{C}$  to  $50^\circ\text{C}$ , unless otherwise specified.

Table 30. Reader characteristics

| Symbol   | Parameter  | Min.   | Typ.  | Max.    | Unit |
|--|--|--------|-------|---------|------|
| f <sub>C</sub>                                     | Frequency of operating field (carrier frequency)                           | 13.553 | 13.56 | 13. 567 | MHz  |
| MI Carrier   | Carrier modulation index <sup>(1)</sup> ISO/IEC 14443-A                    |        |       | 100     | %    |
|  | ISO/IEC 14443-B  | 8      |       | 14      |      |
|  | ISO/IEC 18092  | 8      |       | 14      |      |
|  | ISO/IEC 15693 (10% modulation)   | 10     |       | 30      |      |
|  | ISO/IEC 15693 (100% modulation)  | 80     |       | 100     |      |
| Transmitter specifications (VPS_TX = 2.7 to 3.3 V) |  |        |       |         |      |
|  | Z <sub>OUT</sub> differential impedance between TX1 and TX2 <sup>(1)</sup> |        | 32    |         | Ω    |
|  | Output power for 3V operation on pin VPS_TX <sup>(1)(2)</sup>              |        | 70    |         | mW   |
| Transmitter specifications (VPS_TX = 4.5 to 5.5 V) |  |        |       |         |      |
|  | Z <sub>OUT</sub> differential impedance between TX1 and TX2 <sup>(1)</sup> |        | 16    |         | Ω    |
|  | Output power for 5V operation on pin VPS_TX <sup>(1) (3)</sup>             |        | 250   |         | mW   |
| Receiver specifications                            |  |        |       |         |      |
|  | Small signal differential input resistance (Rx1/Rx2) <sup>(1)</sup>        |        | 80    |         | kΩ   |
|  | Small signal differential input capacitance (Cx1/Cx2) <sup>(1)</sup>       |        | 22    |         | pF   |
|  | Sensitivity (106 Kbps datarate) <sup>(4)</sup>                             |        | 8     |         | mVpp |

1. Values based on design simulation and/or characterization results, and not tested in production.

2. Parameter measured on samples using recommended output matching network. (Z load is 32  $\Omega$  and  $0^\circ$ .)

3. Parameter measured on samples using recommended output matching network. (Z load is 16  $\Omega$  and  $0^\circ$ .)

4. Based on ISO/IEC 10373-6 protocol measurement.

## 6.6 Oscillator characteristics

The external crystal used for this product is a 27.12 MHz crystal with an accuracy of  $\pm 14$  kHz.


**Table 31. HFO 27.12 MHz oscillator characteristics<sup>(1) (2)</sup>**

| Symbol                       | Parameter  | Conditions             | Min. | Typ.  | Max. | Unit       |
|------------------------------|--|------------------------|------|-------|------|------------|
| $f_{XTAL}$                   | Oscillator frequency   |                        |      | 27.12 |      | MHz        |
| $R_F$                        | Feedback resistor  |                        |      | 2     |      | M $\Omega$ |
| C                            | Recommended load capacitance versus equivalent serial resistance of the crystal ( $R_S$ ) <sup>(3)</sup> | $R_S = 30 \Omega$      |      | 6     |      | pF         |
| $t_{SU(HFO)}$ <sup>(4)</sup> | Startup time   | $V_{PS}$ is stabilized |      | 2.5   |      | ms         |

1. Resonator characteristics given by the crystal/ceramic resonator manufacturer.
2. Based on characterization, not tested in production.
3. The relatively low value of the  $R_F$  resistor offers a good protection against issues resulting from use in a humid environment, due to the induced leakage and the bias condition change. However, it is recommended to take this point into account if the Host is used in tough humidity conditions.
4.  $t_{SU(HFO)}$  is the startup time measured from the moment it is enabled (by software) to a stabilized 27.12 MHz oscillation is reached. This value is measured for a standard crystal resonator and it can vary significantly with the crystal manufacturer.

For  $C_{L1}$  and  $C_{L2}$ , it is recommended to use high-quality external ceramic capacitors in the 10 pF to 20 pF range (typ.), designed for high-frequency applications, and selected to match the requirements of the crystal or resonator (see [Figure 14](#)).  $C_{L1}$  and  $C_{L2}$  are usually the same size. The crystal manufacturer typically specifies a load capacitance which is the series combination of  $C_{L1}$  and  $C_{L2}$ .

**Figure 14. Typical application with a 27.12 MHz crystal**

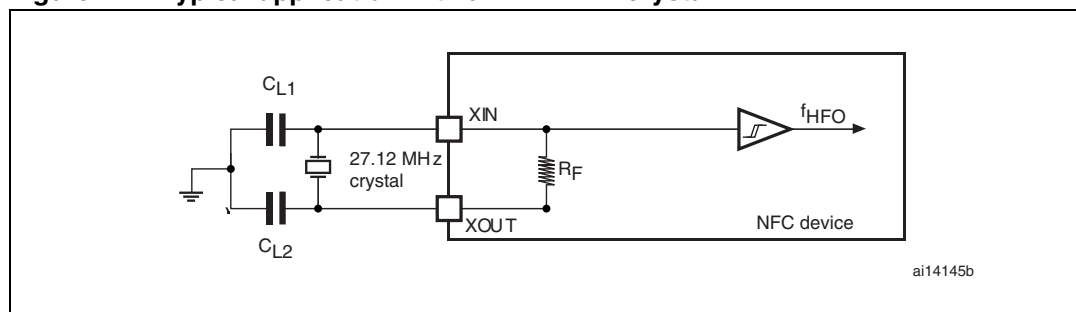

**Note:**

For  $C_{L1}$  and  $C_{L2}$  it is recommended to use high-quality ceramic capacitors in the 10 pF to 20 pF range selected to match the requirements of the crystal or resonator.  $C_{L1}$  and  $C_{L2}$  are usually the same size. The crystal manufacturer typically specifies a load capacitance which is the series combination of  $C_{L1}$  and  $C_{L2}$ .


Load capacitance  $C_L$  has the following formula:  $C_L = C_{L1} \times C_{L2} / (C_{L1} + C_{L2}) + C_{stray}$  where  $C_{stray}$  is the pin capacitance and board or trace PCB-related capacitance. Typically, it is between 2 pF and 7 pF.

## 7 Package mechanical data

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK<sup>®</sup> packages, depending on their level of environmental compliance. ECOPACK<sup>®</sup> specifications, grade definitions and product status are available at: [www.st.com](http://www.st.com). ECOPACK<sup>®</sup> is an ST trademark.

This device is available in a 32-lead, 5x5 mm, 0.5 mm pitch, very thin fine pitch quad flat pack nolead package (VFQFPN).

**Figure 15. 32-lead VFQFPN package outline**

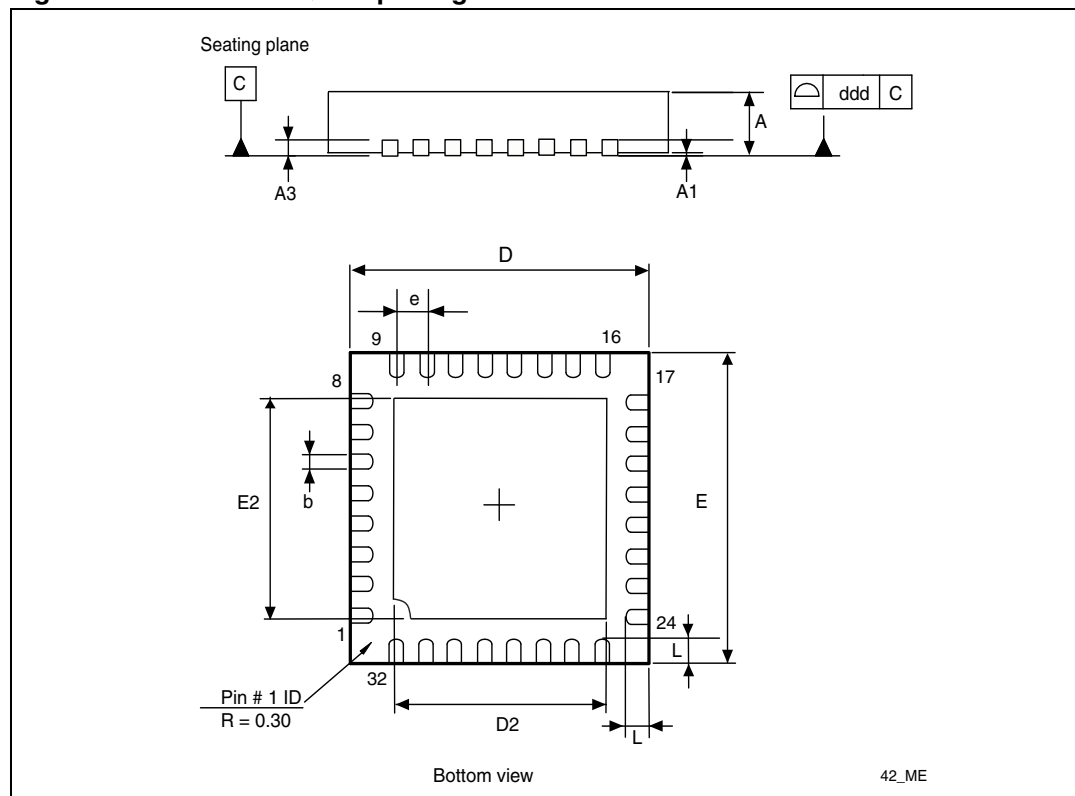

**Table 32. 32-pin VFQFPN package mechanical data**

| Symbol     | millimeters |       |       | inches <sup>(1)</sup> |        |        | Note |
|------------|-------------|-------|-------|-----------------------|--------|--------|------|
|            | Min.        | Typ.  | Max.  | Min.                  | Typ.   | Max.   |      |
| A          | 0.800       | 0.900 | 1.000 | 0.0315                | 0.0354 | 0.0394 |      |
| A1         | 0.000       | 0.020 | 0.050 | 0.0000                | 0.0008 | 0.0020 |      |
| A3         |             | 0.200 |       |                       | 0.0079 |        |      |
| b          | 0.180       | 0.250 | 0.300 | 0.0071                | 0.0098 | 0.0118 |      |
| D          | 4.850       | 5.000 | 5.150 | 0.1909                | 0.1969 | 0.2028 |      |
| D2 (AMK_B) | 3.500       | 3.600 | 3.700 | 0.1378                | 0.1417 | 0.1457 | 1    |
| E          | 4.850       | 5.000 | 5.150 | 0.1909                | 0.1969 | 0.2028 |      |
| E2 (AMK_B) | 3.500       | 3.600 | 3.700 | 0.1378                | 0.1417 | 0.1457 | 1    |
| e          |             | 0.500 |       |                       | 0.0197 |        |      |

Table 32. 32-pin VFQFPN package mechanical data (continued)

| Symbol    | millimeters |       |       | inches <sup>(1)</sup> |        |        | Note |
|-----------|-------------|-------|-------|-----------------------|--------|--------|------|
|           | Min.        | Typ.  | Max.  | Min.                  | Typ.   | Max.   |      |
| L         | 0.300       | 0.400 | 0.500 | 0.0118                | 0.0157 | 0.0197 |      |
| ddd (AMK) |             |       | 0.050 |                       |        | 0.0020 | 2    |

1. Values in inches are rounded to 4 decimal digits.

Note: 1 AMKOR Variation B. Dimensions are not in accordance with JEDEC.  
2 AMKOR.



8 Part numbering

Table 33. Ordering information scheme

|                                 |    |    |    |     |    |   |   |
|---------------------------------|----|----|----|-----|----|---|---|
| Example:                        | CR | 95 | HF | – V | MD | 5 | T |
| <b>Device type</b>              |    |    |    |     |    |   |   |
| CR = Contactless reader IC      |    |    |    |     |    |   |   |
| <b>Wired access</b>             |    |    |    |     |    |   |   |
| 95 = SPI and UART               |    |    |    |     |    |   |   |
| <b>Frequency band</b>           |    |    |    |     |    |   |   |
| HF = High frequency (13.56 MHz) |    |    |    |     |    |   |   |
| <b>Operating voltage</b>        |    |    |    |     |    |   |   |
| V = 2.7 to 3.3 V                |    |    |    |     |    |   |   |
| <b>Package</b>                  |    |    |    |     |    |   |   |
| MD = 32-pin VFQFPN (5 x 5 mm)   |    |    |    |     |    |   |   |
| <b>Operating temperature</b>    |    |    |    |     |    |   |   |
| 5 = –25° to +85° C              |    |    |    |     |    |   |   |
| <b>Packaging</b>                |    |    |    |     |    |   |   |
| T = Tape and Reel               |    |    |    |     |    |   |   |

## Appendix A Additional Idle command description

Revision 1.1 includes an updated Idle command set which now identifies the event that caused the CR95HF to wake up. This section provides examples of use for the Idle command.

The wake-up source is the third of the 16 bytes in the Idle command. This byte specifies authorized Wake-up events. Revision 1.1 now also provides the capability to set the LFO frequency in WFE mode.

The LFO frequency and the authorized wake-up source settings are stored in the Wake-up source register as the parameters of the Idle command.

The Wake-up event is updated by the CR95HF when it exits WFE mode.

The contents of the Wake-up event register can be read using the Read Register command or in the CR95HF reply to the Idle command.

**Table 34. Wake-up source register**

| Bits [7:6]    | Bit 5              | Bit 4             | Bit 3             | Bit 2              | Bit 1      | Bit 0   |
|---------------|--------------------|-------------------|-------------------|--------------------|------------|---------|
| LFO frequency | RFU <sup>(1)</sup> | IRQ on pin SPI_SS | IRQ on pin IRQ_IN | RFU <sup>(1)</sup> | Tag Detect | Timeout |

1. Must be set to '0'.

**Table 35. Wake-up event register**

| Bits [7:6]    | Bit 5 | Bit 4             | Bit 3             | Bit 2 | Bit 1      | Bit 0   |
|---------------|-------|-------------------|-------------------|-------|------------|---------|
| LFO frequency | RFU   | IRQ on pin SPI_SS | IRQ on pin IRQ_IN | RFU   | Tag Detect | Timeout |

**Bits [7:6]** define the LFO frequency ( $f_{LFO}$ ):

00: 32 kHz      01: 16 kHz  
10: 8 kHz      11: 4 kHz

**Bit 4:** When set, the CR95HF will wake up when an external interrupt (low level on pin SPI\_SS) is detected. This is useful for UART communication.

**Bit 3:** When set, the CR95HF will wake up when an external interrupt (low level on pin IRQ\_IN) is detected. This is useful for SPI communication. It is recommended to set this bit to '1' in order to recover in the event of a system crash.

**Bit 1:** When set, the CR95HF will wake up when a tag is detected in the RF field. This bit must also be set during Tag Detection calibration or during a Tag Detection sequence.

**Bit 0:** When set, the CR95HF will wake up and return to Ready state at the end of a predefined cycle. The Timeout (TO) value is defined by the MaxSleep and Wake-up period:

$$TO = (MaxSleep * (WuPeriod + 1)) * t_{REF}$$

$$t_{REF} = 256 * t_L = 8 \text{ ms } (f_{LFO} = 32 \text{ kHz}), \text{ mean power consumption in Sleep mode is } 25 \mu\text{A}$$

$$t_{REF} = 256 * t_L = 64 \text{ ms } (f_{LFO} = 4 \text{ kHz}), \text{ mean power consumption in Sleep mode is } 20 \mu\text{A}$$

**Note:** *Note that:  $0x00 < MaxSleep < 0x1F$ .*

This bit must be set when using the timer as a possible wake-up source. It must be set during Tag Detection Calibration to force a wake-up after the first Tag Detection trial.

## Appendix B Example of tag detection calibration process

From this Revision 1.1 we can directly use the CR95HF reply during Tag Detection Calibration or Tag Detection sequences and avoid using the RdREG command.

This is a dichotomic approach to quickly converge to the DacDataRef value for which a wake-up event switches from tag detection to timeout. In this process, only the DacDataH parameter is changed in successive Idle commands. And we look at the wake-up event reply to decide the next step.

```
00 01 02 corresponds to a Tag Detect,
00 01 01 corresponds to a Timeout.
```

REM, Tag Detection Calibration Test

REM, Sequence: Power-up Tag Detect Wake-up by Tag Detect (1 try measurement greater or equal to DacDataH) or Timeout

REM, CMD 07 0E 03 A200 D801 1800 01 60 60 00 XX 3F 00

REM, 03 WU source = Tagdet or Timeout

REM, A200 Initial Dac Compare

REM, F801 Initial Dac Compare

REM, 1800 HFO

REM, 20 Wup Period 32 Inactivity period = 256ms (LFO @ 32kHz)

REM, 60 Osc 3ms (LFO @ 32kHz)

REM, 60 Dac 3ms (LFO @ 32kHz)

REM, 00 DacDataL = minimum level (floor)

REM, xx DacDataH 00 = minimum level (ceiling)

REM, 3F Swing 13.56 4.6 us

REM, 01 Maximum number of Sleep before Wakeup 2

REM, Tag Detection Calibration Test

REM, During tag detection calibration process DacDataL = 0x00

REM, We execute several tag detection commands with different DacDataH values to determine DacDataRef level corresponding to CR95HF application set-up

REM, DacDataReg value corresponds to DacDataH value for which Wake-up event switches from Timeout (0x01) to Tag Detect (0x02)

REM, Wake-up event = Timeout when DacDataRef is between DacDataL and DacDataH

REM, Search DacDataRef value corresponding to value of DacDataH for which Wake-up event switches from Tag Detect (02) to Timeout(01)

```
REM, Step 0: force wake-up event to Tag Detect (set DacDataH = 0x00)
REM, With these conditions Wake-Up event must be Tag Detect
>>> CR95HFDLL_STCMD, 01070E03A200F80118002060600003F01
<<< 000102
REM, Read Wake-up event = Tag Detect (0x02); if not, error .

REM, Step 1: force Wake-up event to Timeout (set DacDataH = 0xFC)
REM, With these conditions, Wake-Up event must be Timeout
>>> CR95HFDLL_STCMD, 01070E03A200F801180020606000FC3F01
<<< 000101
REM, Read Wake-up event = Timeout (0x01); if not, error .

REM, Step 2: new DacDataH value = previous DacDataH +/- 0x80
REM, If previous Wake-up event was Timeout (0x01) we must decrease
DacDataH (-0x80)
>>> CR95HFDLL_STCMD, 01070E03A200F8011800206060007C3F01
<<< 000101
REM, Read Wake-up event = Timeout (0x01) or Wake-up event = Tag
Detect (0x02)

REM, Step 3: new DacDataH value = previous DacDataH +/- 0x40
REM, If previous Wake-up event was Timeout (0x01), we must decrease
DacDataH (-0x40); else, we increase DacDataH (+ 0x40)
>>> CR95HFDLL_STCMD, 01070E03A200F8011800206060003C3F01
<<< 000102
REM, Read Wake-up event = Timeout (0x01) or Wake-up event = Tag
Detect (0x02)

REM, Step 4: new DacDataH value = previous DacDataH +/- 0x20
REM, If previous Wake-up event was Timeout (0x01), we must decrease
DacDataH (-0x20); else, we increase DacDataH (+ 0x20)
>>> CR95HFDLL_STCMD, 01070E03A200F8011800206060005C3F01
<<< 000102
REM, Read Wake-up event = Timeout (0x01) or Wake-up event = Tag
Detect (0x02)
```

```
REM, Step 5: new DacDataH value = previous DacDataH +/- 0x10
REM, If previous Wake-up event was Timeout (0x01), we must decrease
DacdataH (-0x10); else, we increase DacDataH (+ 0x10)
>>> CR95HFDLL_STCMD, 01070E03A200F8011800206060006C3F01
<<< 000102

REM, Read Wake-up event = Timeout (0x01) or Wake-up event = Tag
Detect (0x02)

REM, Step 6: new DacDataH value = previous DacDataH +/- 0x08
REM, If previous Wake-up event was Timeout (0x01), we must decrease
DacDataH (-0x08); else, we increase DacDataH (+ 0x08)
>>> CR95HFDLL_STCMD, 01070E03A200F801180020606000743F01
<<< 000101

REM, Read Wake-up event = Timeout (0x01) or Wake-up event = Tag
Detect (0x02)

REM, Step 7: new DacDataH value = previous DacDataH +/- 0x04
REM, If previous Wake-up event was Timeout (0x01), we must decrease
DacDataH (-0x04); else, we increase DacDataH (+ 0x04)
>>> CR95HFDLL_STCMD, 01070E03A200F801180020606000703F01
<<< 000101

REM, Read Wake-up event = Timeout (0x01) or Wake-up event = Tag
Detect (0x02)

REM, If last Wake-up event = Tag Detect (0x02), search DacDataRef =
last DacDataH value
REM, If last Wake-up event = Timeout (0x01), search DacDataRef =
last DacDataH value -4

REM, For tag detection usage, we recommend setting DacDataL =
DacDataRef -8 and DacDataH = DacDataRef +8

>>> CR95HFDLL_STCMD, 01070E0B22007801180020606064743F01
<<< 000101
```

## Appendix C      Example of tag detection command using results of tag detection calibration

This is an example of a Tag Detection command when a tag is not present in the RF operating volume using CR95HF revision 1.1.:

```
>>> CR95HFD11_STCmd, 01 070E0B22007801180020606064743F01
<<< 000101 Wake-up event = Timeout (0x01)
>>> CR95HFD11_STCmd, 01 0803620100
<<< 000101
```

This is an example of a Tag Detection command when a tag is present in the RF operating volume using CR95HF revision 1.1.:

```
>>> CR95HFD11_STCmd, 01 070E0B22007801180020606064743F01
<<< 000102 Wake-up event = Tag Detect (0x02)
>>> CR95HFD11_STCmd, 01 0803620100
<<< 000102
```

## Appendix D Examples of CR95HF command code to activate NFC Forum and ISO/IEC 15693 tags

This section provides examples of CR95HF command code used to activate NFC Forum and ISO/IEC 15693 tags using CR95HF development software.

CR95HFDLL\_STCMD: Is the standard CR95HF frame exchange command. In this command, the first byte 01 is not sent, it is only requested by the CR95HF development software in order to recognize if it is a user or service command.

CR95HFDLL\_SENDRECV: Is the encapsulated CR95HF SendReceive command for which command codes, number of bytes, and CRC are automatically appended to the parameter.

In this section,

- The CR95HF command overhead (command code, length of data and transmission flag) is in black.
- The Tag instruction is in blue.
- The CR95HF response overhead (result code, length of data and status) is in green.
- The Tag response is in red.

When the CRC append option is set in the Protocol Select command, the CRC is automatically appended by the CR95HF, but the CRC is not visible in the instruction log file.

When the CRC is present in the command or response, CRC reply is in *italics*.

The following symbols correspond to:

>>> Frame sent by CR95HF

<<< Frame received by CR95HF

### D.1 ISO/IEC 14443 Type A

#### D.1.1 NFC Forum Tag Type 1 (Topaz)

```
REM, CR95HF code example to support NFC Forum Tag Type 1 14443_A
REM, TEST TOPAZ 14443A (UID 6E567A00)
REM, first byte 01 in CR95HFDLL_STCMD is only requested by CR95HF
Development SW
REM, RFOFF
>>> CR95HFDLL_STCMD, 01 02020000
<<< 0000
REM, TEST TOPAZ 14443A (UID 6E567A00)
REM, Sel Prot 14443A option TOPAZ
>>> CR95HFDLL_STCMD, 01 020402000300
<<< 0000
REM, last Byte x7 or x8 in CR95HFDLL_SENDRECV command number of
bits in the 14443 _Type A frame
```

```
REM, REQA reply ATQA 000C
>>> CR95HFDLL_STCMD, 01 04 02 26 07
<<< 80 05 000C 280000
REM, RID reply HR0 HR1 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 78000000000000 A8
<<< 80 0B 11 48 6E567A00 3E45 080000
REM, RA11 0408 0000 UID0 UID 1 UID2 UID3 Reply HR0 HR1 UID0 UID 1
UID2 UID3 datas
>>> CR95HFDLL_STCMD, 01 04 08 000000 6E567A00 A8
<<< 80 40 11 48 6E567A00
0002250000100E000313D1010F5402656E5573652043523935524620210000000000
0000000000000000000000000000000000000000CCCCC
REM, Read ad08 00 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 01 0800 6E567A00 A8
<<< 80 07 08 00 87C1 080000
REM, Write_E ad08 data 12 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 53 0812 6E567A00 A8
<<< 80 07 08 12 14F2 080000
REM, Read ad08 00 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 01 0800 6E567A00 A8
<<< 80 07 08 12 14F2 080000
REM, Write_NE ad08 data A5 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 1A 08A5 6E567A00 A8
<<< 80 07 08 B7 B300 080000
REM, Read ad08 00 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 01 0800 6E567A00 A8
<<< 80 07 08 B7 B300 080000
REM, Write_E ad08 data 00 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 53 0800 6E567A00 A8
<<< 80 07 08 00 87C1 080000
REM, Read ad08 00 UID0 UID 1 UID2 UID3
>>> CR95HFDLL_STCMD, 01 04 08 01 0800 6E567A00 A8
<<< 80 07 08 00 87C1 080000
```



## **D.1.2      NFC Forum Tag Type 2**

REM,    CR95HF code example to support NFC Forum Tag Type 2 14443\_A  
 REM,    TEST INVENTORY then Read & Write in Memory

```

REM, Protocol select 14443A
>>> CR95HFDLL_STCMD, 01 02020200
<<< 0000
>>> CR95HFDLL_ANTICOLSELECT123

----- ISO14443-A STARTING ANTICOLISION ALGORITHM -----
ISO14443-A REQAreply ATQA
>>> CR95HFDLL_SENDRECV, 26 07
<<< 80 05 4400 280000
ISO14443-A ANTICOL 1
>>> CR95HFDLL_SENDRECV, 93 20 08
<<< 80 08 8804179F04 280000
ISO14443-A SELECT 1
>>> CR95HFDLL_SENDRECV, 93 70 8804179F04 28
<<< 80 06 04 DA17 080000
ISO14443-A ANTICOL 2
>>> CR95HFDLL_SENDRECV, 9520 08
<<< 80 08 7910000069 280000
ISO14443-A SELECT 2
>>> CR95HFDLL_SENDRECV, 9570 7910000069 28
<<< 80 06 00 FE51 080000

--> UID = 04179F10000069
--> TAG selected
----- ISO14443-A END OF ANTICOLISION ALGORITHM -----

REM,    READ @A5
>>> CR95HFDLL_SENDRECV, 300C 28
<<< 80 15 00000000FFFFFFFFFFFFFFFFFFFFFFFF F4CD 080000
REM,    WRITE @0C data A5
>>> CR95HFDLL_SENDRECV, A20CA5A5A5A5 28
  
```

```
<<< 8700 : Frame wait time out OR no tag
REM, READ @A5
>>> CR95HFDLL_SENDRECV, 300C 28
<<< 80 15 A5A5A5A5FFFFFFFFFFFFFFFFFFFFFFFF 84D8 080000
```

### D.1.3 NFC Forum Tag Type 4A

\*\*\*\* CR95HF code example to support NFC Forum Tag Type 4A (14443-A) & NDEF message

REM, 14443B (CR95HF Protocol Selection 14443\_A)

REM, first Byte 01 in CR95HFDLL\_STCMD is only requested by CR95HF Development SW

\*\*\*\*\* CR95HF setting to support extended Frame Waiting Time  
\*\*\*\*\*

>>> CR95HFDLL\_STCMD, 01 020402000180

<<< 0000

REM, last Byte x7 or x8 in CR95HFDLL\_SENDRECV command number of bit in the 14443\_Type A frame

>>> CR95HFDLL\_ANTICOLSELECT123

----- ISO14443-A STARTING ANTICOLISION ALGORITHM -----

ISO14443-A REQA

>>> CR95HFDLL\_SENDRECV, 26 07

<<< 80 05 0400 280000

ISO14443-A ANTICOL 1

>>> CR95HFDLL\_SENDRECV, 9320 08

<<< 80 08 08192D A29E 280000

ISO14443-A SELECT 1

>>> CR95HFDLL\_SENDRECV, 937008192DA29E 28

<<< 80 06 20 FC70 080000

--> UID = 192DA29E , TAG selected

----- ISO14443-A END OF ANTICOLISION ALGORITHM -----

\*\*\* ISO14443A\_4 RATS/ATS (bit rate capability/FDT/CID usage)

>>> CR95HFDLL\_SENDRECV, E050 28

<<< 80 0A 057833B003 A0F8 080000

\*\*\*\*\* ISO14443A\_4 PPS (Protocol parameter data rate)

```
>>> CR95HFDLL_SENDRECV, D01100 28
```

```
<<< 80 06 D0 7387 080000
```

```
** ISO14443_4 APDU (command & reply are using Iblock format,  
Prolog Information (APDU) Epilog)
```

```
*** 7816_ APDU format (Class Instruction, Param , Length cmd data  
Length expected)
```

```
*** last byte 28 is a control byte to request CR95HF to  
automatically happen CRC as Epilog
```

```
*** In response first 2 Byte 80 xx and last three bytes 08 0000 are  
CR95HF's control bytes
```

```
*** Detect & Access NDEF Message
```

```
*** Select Application by name
```

```
>>> CR95HFDLL_SENDRECV, 02 00 A4040007D2760000850100 28
```

```
<<< 80 08 02 9000 F109 080000
```

```
***** Select CC File by name
```

```
>>> CR95HFDLL_SENDRECV, 03 00 A4000002E103 28
```

```
<<< 80 08 03 9000 2D53 080000
```

```
***** ReadBinary CC (offset Le)
```

```
>>> CR95HFDLL_SENDRECV, 02 00 B000000F 28
```

```
<<< 80 17 02 000F1000FF00FF0406000100FF0000 9000 B755 080000
```

```
***** Select NDEF MSG by Identifier 0001
```

```
>>> CR95HFDLL_SENDRECV, 03 00 A40000020001 28
```

```
<<< 80 08 03 9000 2D53 080000
```

```
***** ReadBinary NDEF MSG (MSG Length offset 00 2  
bytes)
```

```
>>> CR95HFDLL_SENDRECV, 02 00 B0000002 28
```

```
<<< 80 0A 02 0015 9000 ABB3 080000
```

```
***** Select NDEF File by name
```

```
>>> CR95HFDLL_SENDRECV, 03 00 A40000020001 28
```

```
<<< 80 08 03 9000 2D53 080000
```

```
***** ReadBinary NDEF (MSG offset 02 , 20 Bytes)
>>> CR95HFDLL_SENDRECV, 02 00 B0000215 28
<<< 80 1D 02D101115402656E4D32344C52313620747970652034 9000 25C5
080000

*** header D1 type 01 Payload 11 type 54 status 02 english 656E
, MSG : M24LR16 type
```

## D.2 ISO/IEC 14443 Type B

### D.2.1 NFC Forum Tag Type 4B

```
**** CR95HF code example to support NFC Forum Tag Type 4B (14443-B)
& NDEF message

REM, Check CR95HF setting & Protocol selection
REM, FIELD OFF

REM, first Byte 01 in CR95HFDLL_STCMD is only requested by CR95HF Development
SW
>>> CR95HFDLL_STCMD, 01 02020000
<<< 0000

REM, 14443B (CR95HF PROTOCOL Selection 14443_B
>>> CR95HFDLL_STCMD, 01 020403010180
<<< 0000

REM, 14443B Optimization CR95HF Analog Configuration for 144443 ( 3F )
>>> CR95HFDLL_STCMD, 01 09046801013F
<<< 0000

REM, Access to NFC FORUM TAG Type 4B
REM, REQB 0x 050000 + CRC_B (APf AFI Param (slot0))
REM, Reply ATQB 0x50 4Bytes 4 Bytes 3 Bytes + CRC_B (PUPi AppliData Protocol Info)
REM, Reply from CR95HF 80 0F 50AABBCCDD30ABAB010081E1AE00 00
REM, 80 response OK , 0F nb byte response including tag reply and the ultimate CR95HF
status byte 00 (reply OK)
REM, Tag reply 50AABBCCDD30ABAB010081E1AE00
REM, Response code 50
REM, Pupi AABBCCDD
REM, AFI 30 access control
```

```
REM, CRC_B(AID) ABAB
REM, Nb Appli (1) 01
REM, Prot Info byte1 00 (106kbs both direction)
REM, Prot Info byte 2 81( frame max 256 Bytes ISO compliant) 0081E1AE0000
REM, Prot Info byte 3 E1 (Max Frame wait time 4.9 ms Appli proprietary CID supported)
REM, CRC_B AE00
```

```
REM, 14443_3
REM, REQB ....
>>> CR95HFDLL_STCMD, 01 04 03 050000
<<< 80 0F 50AABBCCDD30ABAB010081E1 AE00 00
```

```
REM, ATTRIB 0x1D PUPI 1byte 1byte 1byte 1 byte + CRC_B (1D Identifier Param1
Param2 Param3 Param4)
REM, Param1 00 use default TR0 TR1 use EOF
REM, Param2 07 max frame size 106kbps Up & Dwn link
REM, Param3 01 Iso14443 compliant
REM, Param4 08 CID (8) card Identifier
REM, reply CR95HF 80 04 18EBC3 00
REM, 80 response OK 04 nb byte response including ultimate byte 00 CR95HF reply OK
REM, Reply 10F9E0 coefBufferLength 1 CID 1 + CRC_B
```

```
REM, ATTRIB ....CID0
>>> CR95HFDLL_STCMD, 01 04 09 1D AABBCDD00070100
<<< 80 04 10 F9E0 00
```

```
REM, 14443_4 , CID not used
REM, APDU for NDEF management
REM, command format (INF) CLA INS P1 P2 Lc(optional) Data(optional)
REM, Response (optional): body (optional) Sw1 sW2
REM, Block Format Prolog INFO Epilog ( 02 [CID] [NAD] [INF] CRC_B )
REM, Sequence lecture NDEF ( for all following commands CRC_B is automatically
appends by CR95HF)
```

```
REM, Select application suivant la version du tag (100)
>>> CR95HFDLL_SENDRECV, 02 00 A4 040007D2760000850100
```

```
<<< 80 06 029000296A 00
REM, response 90 00 ok
REM, response 6A 82 application not found
REM, Select CC
>>> CR95HFDLL_SENDRECV, 03 00 A4 0000 02 E103
<<< 80 06 03 9000 F530 00
REM, Read CC
>>> CR95HFDLL_SENDRECV, 02 00 B0 0000 0F
<<< 80 15 02 000F1000FF00FF0406000110020000 9000 E7FA 00
REM, Select Ndef 0001
>>> CR95HFDLL_SENDRECV, 03 00 A4 0000 02 0001
<<< 80 06 03 9000 F530 00
REM, Read Msg Length
>>> CR95HFDLL_SENDRECV, 02 00 B0 0000 02
<<< 80 08 02 0013 9000 53AA 00
REM, Select Ndef 0001
>>> CR95HFDLL_SENDRECV, 03 00 A4 0000 02 0001
<<< 80 06 03 9000 F530 00
REM, Read Message
>>> CR95HFDLL_SENDRECV, 02 00 B0 0002 13
<<< 80 19 02 D1010F5402656E557365204352393548462021 9000 8571 00
```

## D.3 ISO/IEC 18092

### D.3.1 NFC Forum Tag Type 3 (FeliCa)

```
REM, CR95HF code example to support NFC Forum Tag Type 3
REM, TEST INVENTORY 14443C
REM, RFOFF
>>> CR95HFDLL_STCMD, 01 02020000
<<< 0000
REM, Select Protocol 14443C
>>> CR95HFDLL_STCMD, 01 02020451
<<< 0000
REM, 14443C New Gain 5F
>>> CR95HFDLL_STCMD, 01 09046801015F
```

```
<<< 0000
REM, REQC 00 FFFF 00 00 (command code System code No request slot
0)
REM, ATQC 80 12 01 010102148E0DB413 (Manuf ID) 100B4B428485D0FF
(Manuf Parameter)
>>> CR95HFDLL_STCMD, 01 04 05 00FFFFFF0000
<<< 80 12 01 010102148E0DB413 100B4B428485D0FF 00
```

## **D.4      ISO/IEC 15693**

### **D.4.1    Tag Type 5**

**REM, Test Tag ISO/IEC 15693 (LR family)**

REM, Protocol Selection Up link Ask 30% coding 1/4  
REM, Down link Single Sub carrier High data rate  
REM, Inventory One Slot  
REM, Command Protocol Select 02 02 01 05

REM, Protocol Selection  
>>> CR95HFDLL\_STCMD, 01 02020105  
<<< 0000

REM, Modif IndexMod & Gain in Reg Analog Value @69\_index1 53  
>>> CR95HFDLL\_STCMD, 01 090468010153  
<<< 0000

REM, Inventory 1 Slot  
>>> CR95HFDLL\_STCMD, 01 0403 260100  
<<< 80 0D 0000B7100128B42102E0 66CC 00

REM, GetSystem Info  
REM, Flags, UID E00221B4280110B7 DSFID 00 AFI 00 MemorySize 3F BlockSize 03 IC  
Reference 21  
  
>>> CR95HFDLL\_SENDRECV, 022B  
<<< 80 12 00 0F B7100128B42102E0000003F03 21 DFB0 00

**REM, Tes Tag ISO/IEC 15693 (Dual family)**

REM, Protocol Selection Up link Ask 30% coding 1/4

REM, Down link Single Sub carrier High data rate

REM, Inventory 1 Slot

REM, Command Protocol Select 02 02 01 05

REM, Protocol Selection

>>> CR95HFDLL\_STCMD, 01 02020105

<<< 0000

REM, Modif IndexMod & Gain in Reg Analog Value @69\_index1 53

>>> CR95HFDLL\_STCMD, 01 090468010153

<<< 0000

REM, Inventory 1 Slot

>>> CR95HFDLL\_STCMD, 01 0403 260100

<<< 80 0D 00FF07062092132C02E0 3D22 00

REM, GetSystem Info

REM, Flags ,UID E0022C1392200607 DSFID FF AFI 00 MemorySize 07FF BlockSize 03  
IC Reference 2C

>>> CR95HFDLL\_SENDRECV, 0A2B

<<< 80 13 00 0F 07062092132C02E0 FF 00 FF07 03 2C 984D 00



## Revision history

**Table 36. Document revision history**

| Date        | Revision | Changes   |
|-------------|----------|---|
| 30-Mar-2011 | 1        | Initial release.  |
| 08-Sep-2011 | 2        | Removed SSI_2 pin.  |
| 26-Oct-2011 | 3        | Upgraded document from Preliminary Data to full Datasheet.  |
| 28-Oct-2011 | 4        | Updated device revision information. Added <a href="#">Section 6.2: DC characteristics on page 34</a> and updated <a href="#">Section 6.3: Power consumption characteristics on page 35</a> . |

**Please Read Carefully:**

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

**UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.**

**UNLESS EXPRESSLY APPROVED IN WRITING BY TWO AUTHORIZED ST REPRESENTATIVES, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.**

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2011 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

[www.st.com](http://www.st.com)